

**NuMicro® Family****Arm® Cortex®-M0-based Microcontroller**

# **NuMaker-NUC240V**

## **User Manual**

***Evaluation Board for NuMicro® NUC240V Series***

*The information described in this document is the exclusive intellectual property of Nuvoton Technology Corporation and shall not be reproduced without permission from Nuvoton.*

*Nuvoton is providing this document only for reference purposes of NuMicro microcontroller and microprocessor based system design. Nuvoton assumes no responsibility for errors or omissions.*

*All data and specifications are subject to change without notice.*

For additional information or questions, please contact: Nuvoton Technology Corporation.

[www.nuvoton.com](http://www.nuvoton.com)

**Table of Contents**

|  |           |
|--|-----------|
| <b>1 OVERVIEW .....</b>                                | <b>6</b>  |
| <b>2 FEATURES .....</b>                                | <b>7</b>  |
| <b>3 HARDWARE CONFIGURATION.....</b>                   | <b>8</b>  |
| 3.1 Front View.....                                    | 8         |
| 3.2 Rear View .....                                    | 9         |
| 3.3 Extension Connectors.....                          | 10        |
| 3.3.1 Pin Assignment for Extension Connectors .....    | 10        |
| 3.3.2 Arduino UNO Compatible Extension Connectors..... | 14        |
| 3.4 Power Supply Configuration .....                   | 16        |
| 3.4.1 VIN Power Source.....                            | 16        |
| 3.4.2 5 V Power Sources .....                          | 16        |
| 3.4.3 3.3 V Power Sources .....                        | 17        |
| 3.4.4 1.8 V Power Sources .....                        | 17        |
| 3.4.5 Power Connectors.....                            | 17        |
| 3.4.6 USB Connectors.....                              | 18        |
| 3.4.7 Power Switches .....                             | 18        |
| 3.4.8 Power Supply Models .....                        | 18        |
| 3.5 External Reference Voltage Connector.....          | 22        |
| 3.6 Ammeter Connector.....                             | 22        |
| 3.7 Push Buttons.....                                  | 23        |
| 3.8 LEDs.....  | 23        |
| 3.9 Nu-Link2-Me.....                                   | 23        |
| 3.9.1 VCOM Switches.....                               | 23        |
| 3.9.2 Status LEDs .....                                | 24        |
| 3.10 CAN Bus Interface.....                            | 24        |
| <b>4 QUICK START .....</b>                             | <b>26</b> |
| 4.1 Toolchains Supporting .....                        | 26        |
| 4.2 Nuvoton Nu-Link Driver Installation .....          | 26        |
| 4.3 BSP Firmware Download .....                        | 28        |
| 4.4 Hardware Setup.....                                | 28        |
| 4.5 Find the Example Project .....                     | 30        |
| 4.6 Execute the Project under Toolchains .....         | 30        |
| 4.6.1 Keil MDK.....                                    | 30        |
| 4.6.2 IAR EWARM.....                                   | 34        |
| <b>5 NUMAKER-NUC240V SCHEMATICS .....</b>              | <b>36</b> |

|                                      |           |
|--------------------------------------|-----------|
| 5.1 Nu-Link2-Me .....                | 36        |
| 5.2 NuMaker-NUC240V Schematics ..... | 37        |
| 5.3 Extension Connectors.....        | 38        |
| 5.4 PCB Placement .....              | 39        |
| <b>6 REVISION HISTORY .....</b>      | <b>40</b> |

## List of Figures

|   |    |
|---|----|
| Figure 1-1 NuMaker-NUC240V Evaluation Board .....                     | 6  |
| Figure 3-1 Front View of NuMaker-NUC240V .....                        | 8  |
| Figure 3-2 Rear View of NuMaker-NUC240V .....                         | 9  |
| Figure 3-3 NUC240V Extension Connectors .....                         | 10 |
| Figure 3-4 Arduino UNO Compatible Extension Connectors.....           | 14 |
| Figure 3-5 External Power Supply Sources on Nu-Link2-Me .....         | 18 |
| Figure 3-6 External Power Supply Sources on NUC240V Target Board..... | 19 |
| Figure 3-7 Detach the Nu-Link2-Me from NuMaker-NUC240V .....          | 20 |
| Figure 3-8 Wiring between Ammeter Connector and Ammeter.....          | 22 |
| Figure 3-9 Project Path of SYS_PowerDown_MinCurrent .....             | 22 |
| Figure 4-1 Nu-Link USB Driver Installation Setup.....                 | 26 |
| Figure 4-2 Nu-Link USB Driver Installation .....                      | 27 |
| Figure 4-3 Open VCOM Function .....                                   | 28 |
| Figure 4-4 ICE USB Connector.....                                     | 28 |
| Figure 4-5 Device Manger.....   | 29 |
| Figure 4-6 PuTTY Session Setting.....                                 | 29 |
| Figure 4-7 Template Project Folder Path.....                          | 30 |
| Figure 4-8 Warning Message of “Device not found” .....                | 30 |
| Figure 4-9 Project File Migrate to Version 5 Format.....              | 31 |
| Figure 4-10 Debugger Setting in Options Window.....                   | 31 |
| Figure 4-11 Programming Setting in Options Window.....                | 32 |
| Figure 4-12 Compile and Download the Project .....                    | 32 |
| Figure 4-13 Keil MDK Debug Mode .....                                 | 33 |
| Figure 4-14 Debug Message on Serial Port Terminal Windows.....        | 33 |
| Figure 4-15 IAR EWARM Window .....                                    | 34 |
| Figure 4-16 Compile and Download the Project .....                    | 34 |
| Figure 4-17 IAR EWARM Debug Mode .....                                | 35 |
| Figure 4-18 Debug Message on Serial Port Terminal Windows.....        | 35 |
| Figure 5-1 Nu-Link2-Me Circuit .....                                  | 36 |
| Figure 5-2 NUC240V Target Board Circuit .....                         | 37 |
| Figure 5-3 Extension Connectors Circuit .....                         | 38 |
| Figure 5-4 Front Placement .....                                      | 39 |
| Figure 5-5 Rear Placement .....                                       | 39 |

## List of Tables

|  |    |
|--|----|
| Table 3-1 Extension Connectors.....  | 10 |
| Table 3-2 NUC240V Full-pin Extension Connectors and GPIO Function List.....    | 13 |
| Table 3-3 Arduino UNO Extension Connectors and NUC240V Mapping GPIO List ..... | 15 |
| Table 3-4 Vin Power Source .....   | 16 |
| Table 3-5 5 V Power Sources .....  | 16 |
| Table 3-6 3.3 V Power Sources .....  | 17 |
| Table 3-7 1.8 V Power Sources .....  | 17 |
| Table 3-8 Power Connectors .....   | 17 |
| Table 3-9 USB Connectors .....   | 18 |
| Table 3-10 Power Switches .....  | 18 |
| Table 3-11 Supply External Power through Nu-Link2-Me .....                     | 19 |
| Table 3-12 Supply External Power for NUC240V Target Board.....                 | 21 |
| Table 3-13 External Reference Voltage Connector .....                          | 22 |
| Table 3-14 Ammeter Connector.....  | 22 |
| Table 3-15 Push Buttons.....   | 23 |
| Table 3-16 LEDs .....  | 23 |
| Table 3-17 VCOM Function of Nu-Link2-Me.....                                   | 23 |
| Table 3-18 Operation Status LED Patterns .....                                 | 24 |
| Table 3-19 CAN Bus Interface .....   | 24 |
| Table 3-20 U10 Pin Connection .....  | 25 |
| Table 3-21 U12 Pin Connection .....  | 25 |

## 1 OVERVIEW

The NuMaker-NUC240V is an evaluation board for Nuvoton NuMicro NUC230/NUC240 series microcontrollers. The NuMaker-NUC240V consists of two parts: an NUC240V target board and an on-board Nu-Link2-Me debugger and programmer. The NuMaker-NUC240V is designed for project evaluation, prototype development and validation with power consumption monitoring function. The NuMaker-NUC240V is suitable for automotive and industrial control applications developing which need reliable and robust CAN communication.

The NUC240V target board is based on NuMicro NUC240VE3AE. For the development flexibility, the NUC240V target board provides the extension connectors, the Arduino UNO compatible headers and the capability of adopting multiple power supplies. Furthermore, the Nuvoton-designed ammeter connector can measure the power consumption instantly, which is essential for the prototype evaluation. Additionally, the NUC240V target board implements a CAN bus interface with an AEC-Q100 qualified high-speed CAN transceiver to realize new CAN design.

In addition, there is an attached on-board debugger and programmer "Nu-Link2-Me". The Nu-Link2-Me supports on-chip debugging, online and offline ICP programming via SWD interface. The Nu-Link2-Me supports virtual COM (VCOM) port for printing debug messages on PC. Besides, the programming status could be shown on the built-in LEDs. Lastly, the Nu-Link2-Me could be detached from the evaluation board and become a stand-alone mass production programmer.

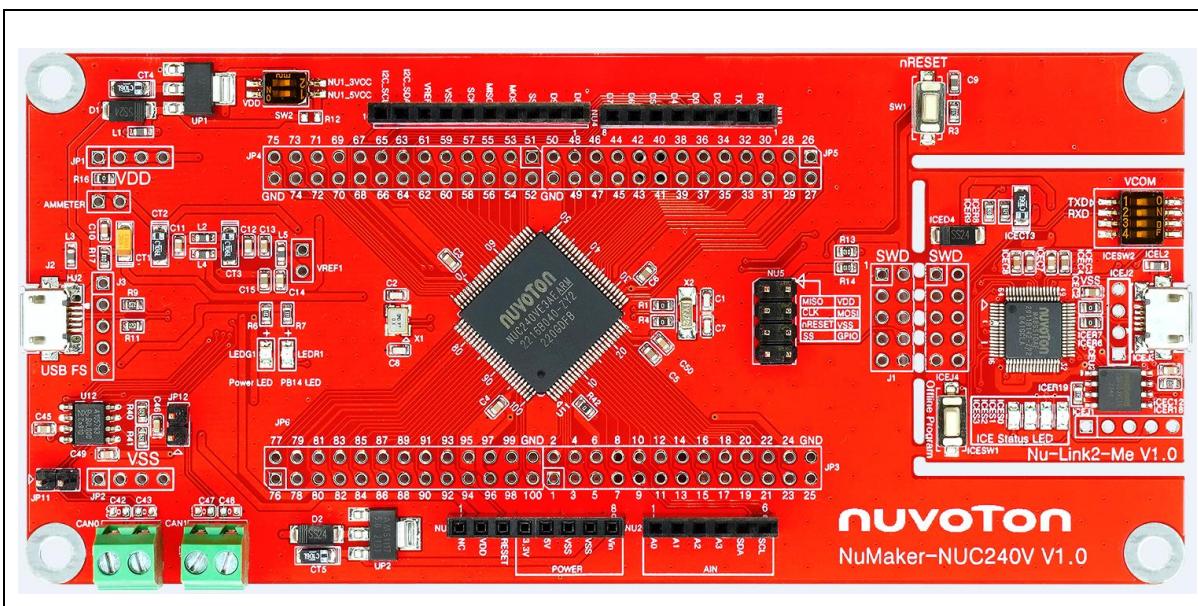


Figure 1-1 NuMaker-NUC240V Evaluation Board

## 2 FEATURES

- NuMicro NUC240VE3AE used as main microcontroller with function compatible with:
  - NUC230LC2AE
  - NUC230LD2AE
  - NUC230LE3AE
  - NUC230SC2AE
  - NUC230SD2AE
  - NUC230SE3AE
  - NUC230VE3AE
  - NUC240LC2AE
  - NUC240LD2AE
  - NUC240LE3AE
  - NUC240SC2AE
  - NUC240SD2AE
  - NUC240SE3AE
  - NUC240VE3AE
- NUC240V full pins extension connectors
- Arduino UNO compatible extension connectors
- Ammeter connector for measuring the microcontroller's power consumption
- Flexible board power supply:
  - External V<sub>DD</sub> power connector
  - Arduino UNO compatible extension connector Vin
  - USB FS connector on NUC240V target board
  - ICE USB connector on Nu-Link2-Me
- On-board Nu-Link2-Me debugger and programmer:
  - Debug through SWD interface
  - Online/offline programming
  - Virtual COM port function

### 3 HARDWARE CONFIGURATION

#### 3.1 Front View

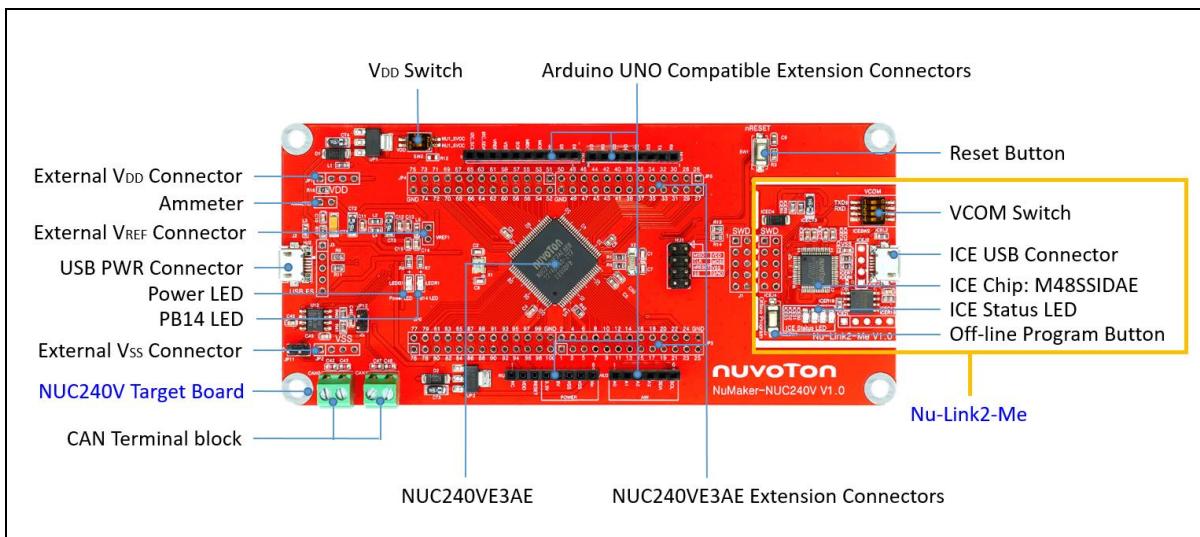


Figure 3-1 Front View of NuMaker-NUC240V

Figure 3-1 shows the main components and connectors from the front side of NuMaker-NUC240V. The following lists components and connectors from the front view:

- Target chip: NUC240VE3AE (U1)
- USB PWR Connector (J2)
- Arduino UNO Compatible Extension Connectors (NU1, NU2, NU3, NU4)
- NUC240V Extension Connectors (JP3, JP4, JP5 and JP6)
- External V<sub>DD</sub> Power Connector (JP1)
- External V<sub>SS</sub> Power Connector (JP2)
- External V<sub>REF</sub> Connector (VREF1)
- V<sub>DD</sub> Switch (SW2)
- Ammeter Connector (AMMETER)
- Reset Button (SW1)
- Power LED and PB14 LED (LEDG1 and LEDR1)
- CAN Terminal Block(CAN0, CAN1)
- Nu-Link2-Me
  - VCOM Switch
  - ICE Chip: M48SSIDAE (ICEU2)
  - ICE USB Connector (ICEJ3)
  - ICE Status LED (ICES0, ICES1, ICES2, ICES3)
  - Off-line Program Button (ICESW1)

### 3.2 Rear View

Figure 3-2 shows the main components and connectors from the rear side of NuMaker-NUC240V.

The following lists components and connectors from the rear view:

- Nu-Link2-Me
  - MCUVCC Power Switch (ICEJPR1)
  - ICEVCC Power Switch (ICEJPR2)

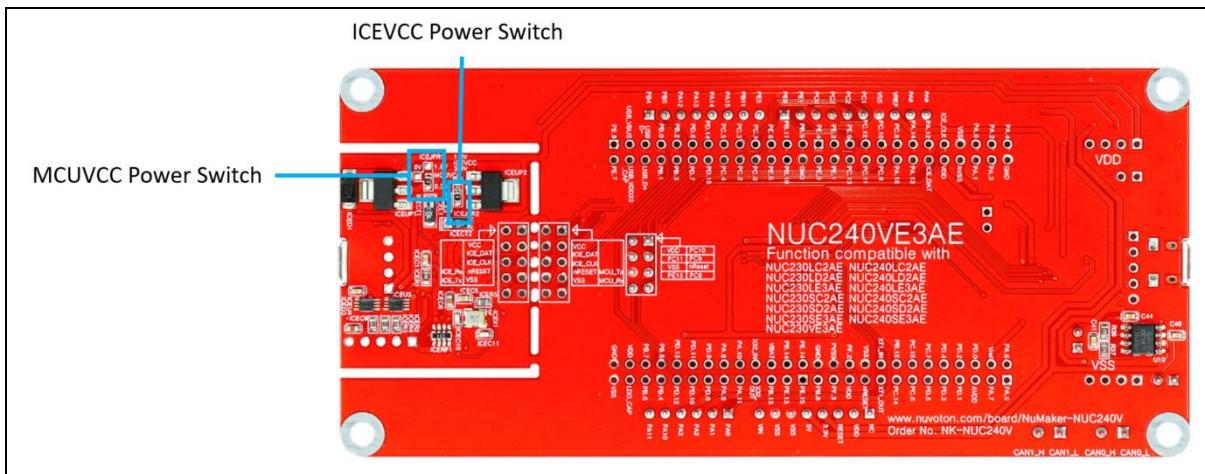


Figure 3-2 Rear View of NuMaker-NUC240V

### 3.3 Extension Connectors

Table 3-1 presents the extension connectors.

| Connector             | Description  |
|-----------------------|--|
| JP3, JP4, JP5 and JP6 | Full pins extension connectors on the NuMaker-NUC240V. |
| NU1, NU2, NU3 and NU4 | Arduino UNO compatible pins on the NuMaker-NUC240V.    |

Table 3-1 Extension Connectors

#### 3.3.1 Pin Assignment for Extension Connectors

The NuMaker-NUC240V provides the NUC240V onboard and extension connectors (JP3, JP4, JP5 and JP6). Figure 3-3 shows the NUC240V extension connectors.

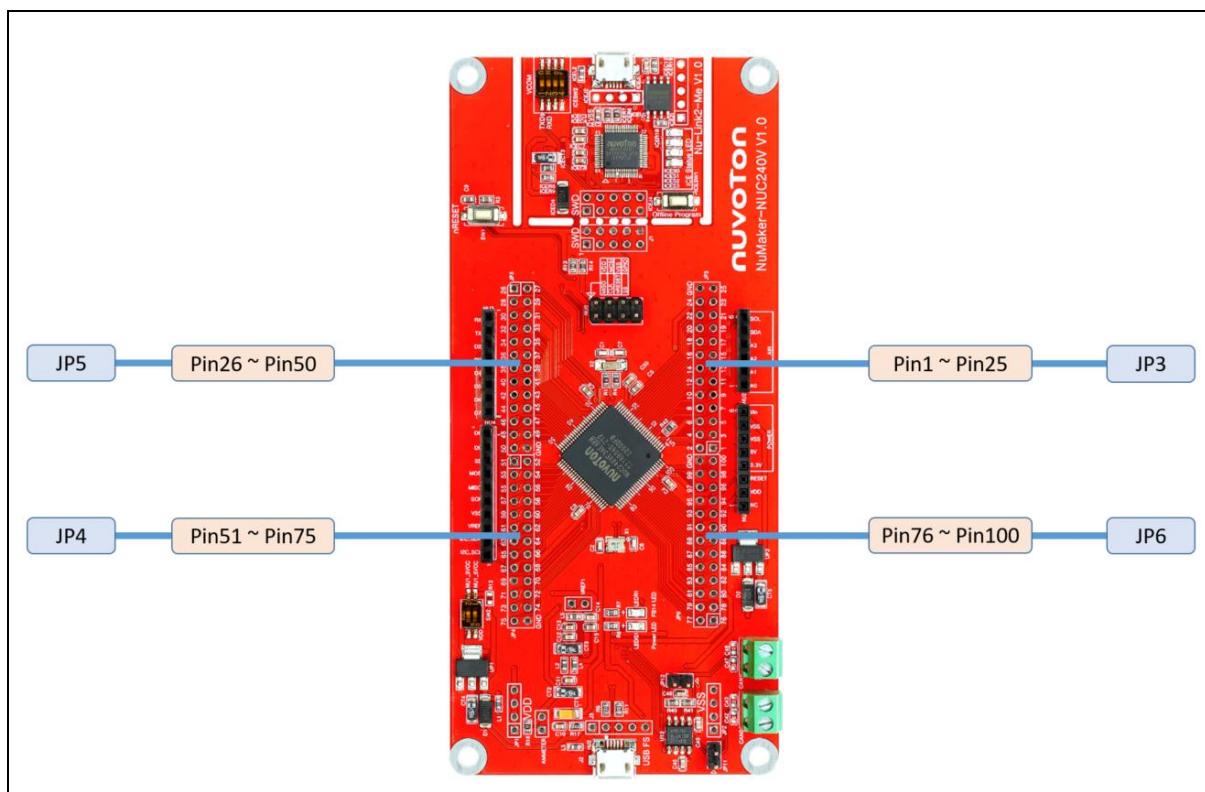


Figure 3-3 NUC240V Extension Connectors

| Header | NUC240VE3AE |   |
|--------|-------------|---|
|        | Pin No.     | Function  |
| JP3    | JP3.1       | 1 PE.15   |
|        | JP3.2       | 2 PE.14   |
|        | JP3.3       | 3 PE.13   |
|        | JP3.4       | 4 PB.14 / AD0 / INT0 / SPI3_SS1                       |
|        | JP3.5       | 5 PB.13 / AD1 / ACMP1_O                               |
|        | JP3.6       | 6 VBAT  |
|        | JP3.7       | 7 X32_OUT   |
|        | JP3.8       | 8 X32_IN  |
|        | JP3.9       | 9 PA.11 / I2C1_SCL / CAN1_RXD / nRD                   |
|        | JP3.10      | 10 PA.10 / I2C1_SDA / CAN1_TXD / nWR                  |
|        | JP3.11      | 11 PA.9 / I2C0_SCL                                    |
|        | JP3.12      | 12 PA.8 / I2C0_SDA                                    |
|        | JP3.13      | 13 PD.8 / SPI3_SS0                                    |
|        | JP3.14      | 14 PD.9 / SPI3_CLK                                    |
|        | JP3.15      | 15 PD.10 / SPI3_MISO0                                 |
|        | JP3.16      | 16 PD.11 / SPI3_MOSI0                                 |
|        | JP3.17      | 17 PD.12 / SPI3_MISO1                                 |
|        | JP3.18      | 18 PD.13 / SPI3_MOSI1                                 |
|        | JP3.19      | 19 PB.4 / UART1_RXD                                   |
|        | JP3.20      | 20 PB.5 / UART1_TXD                                   |
|        | JP3.21      | 21 PB.6 / ALE / UART1_nRTS                            |
|        | JP3.22      | 22 PB.7 / nCS / UART1_nCTS                            |
|        | JP3.23      | 23 LDO_CAP  |
|        | JP3.24      | 24 VDD  |
|        | JP3.25      | 25 VSS  |
|        | JP3.26      | GND GND   |
| JP5    | JP5.1       | 26 PE.8   |
|        | JP5.2       | 27 PE.7   |
|        | JP5.3       | 28 USB_VBUS   |
|        | JP5.4       | 29 USB_V <sub>DD33</sub> _CAP                         |
|        | JP5.5       | 30 USB_D-   |
|        | JP5.6       | 31 USB_D+   |
|        | JP5.7       | 32 PB.0 / UART0_RXD                                   |
|        | JP5.8       | 33 PB.1 / UART0_TXD                                   |
|        | JP5.9       | 34 PB.2 / nWRL / UART0_nRTS / TM2_EXT / TM2 / ACMP0_O |

| Header | NUC240VE3AE |  |
|--------|-------------|--|
|        | Pin No.     | Function   |
| JP4    | JP5.10      | 35 PB.3 / UART0_nCTS / nWRH / TM3_EXT / TM3 / SC2_CD |
|        | JP5.11      | 36 PD.6 / CAN0_RXD                                   |
|        | JP5.12      | 37 PD.7 / CAN0_TXD                                   |
|        | JP5.13      | 38 PD.14 / UART2_RXD / CAN1_RXD                      |
|        | JP5.14      | 39 PD.15 / UART2_TXD / CAN1_TXD                      |
|        | JP5.15      | 40 PC.5 / SPI0_MOSI1                                 |
|        | JP5.16      | 41 PC.4 / SPI0_MISO1                                 |
|        | JP5.17      | 42 PC.3 / SPI0_MOSI0 / I2S_DO                        |
|        | JP5.18      | 43 PC.2 / SPI0_MISO0 / I2S_DI                        |
|        | JP5.19      | 44 PC.1 / SPI0_CLK / I2S_BCLK                        |
|        | JP5.20      | 45 PC.0 / SPI0_SS0 / I2S_LRCLK                       |
|        | JP5.21      | 46 PE.6  |
|        | JP5.22      | 47 PE.5 / PWM5 / TM1_EXT / TM1                       |
|        | JP5.23      | 48 PB.11 / TM3 / PWM4                                |
|        | JP5.24      | 49 PB.10 / TM2 / SPI0_SS1                            |
|        | JP5.25      | 50 PB.9 / TM1 / SPI1_SS1                             |
|        | JP5.26      | GND GND  |
|        | JP4.1       | 51 PE.4  |
|        | JP4.2       | 52 PE.3  |
|        | JP4.3       | 53 PE.2  |
|        | JP4.4       | 54 PE.1 / PWM7                                       |
|        | JP4.5       | 55 PE.0 / PWM6                                       |
|        | JP4.6       | 56 PC.13 / SPI1_MOSI1                                |
|        | JP4.7       | 57 PC.12 / SPI1_MISO1                                |
|        | JP4.8       | 58 PC.11 / SPI1_MOSI0                                |
|        | JP4.9       | 59 PC.10 / SPI1_MISO0                                |
|        | JP4.10      | 60 PC.9 / SPI1_CLK                                   |
|        | JP4.11      | 61 PC.8 / MCLK / SPI1_SS0                            |
|        | JP4.12      | 62 PA.15 / PWM3 / I2S_MCLK / SC2_PWR                 |
|        | JP4.13      | 63 PA.14 / PWM2 / AD15 / SC2_RST                     |
|        | JP4.14      | 64 PA.13 / PWM1 / AD14 / SC2_CLK / UART5_TXD         |
|        | JP4.15      | 65 PA.12 / PWM0 / AD13 / SC2_DAT / UART5_RXD         |
|        | JP4.16      | 66 ICE_DAT   |
|        | JP4.17      | 67 ICE_CLK   |
|        | JP4.18      | 68 VDD   |

| Header | NUC240VE3AE |   |
|--------|-------------|---|
|        | Pin No.     | Function  |
| JP4    | JP4.19      | 69 VSS  |
|        | JP4.20      | 70 AVSS   |
|        | JP4.21      | 71 PA.0 / ADC0 / SC0_PWR                              |
|        | JP4.22      | 72 PA.1 / ADC1 / SC0_RST / AD12                       |
|        | JP4.23      | 73 PA.2 / ADC2 / SC0_CLK / UART3_TXD / AD11           |
|        | JP4.24      | 74 PA.3 / ADC3 / SC0_DAT / UART3_RXD / AD10           |
|        | JP4.25      | 75 PA.4 / ADC4 / AD9 / SC1_PWR                        |
|        | JP4.26      | GND GND   |
| JP6    | JP6.1       | 76 PA.5 / ADC5 / AD8 / SC1_RST                        |
|        | JP6.2       | 77 PA.6 / ADC6 / AD7 / SC1_CLK / UART4_TXD            |
|        | JP6.3       | 78 PA.7 / ADC7 / AD6 / SC1_DAT / UART4_RXD / SPI2_SS1 |
|        | JP6.4       | 79 VREF   |
|        | JP6.5       | 80 AVDD   |
|        | JP6.6       | 81 PD.0 / SPI2_SS0                                    |
|        | JP6.7       | 82 PD.1 / SPI2_CLK                                    |
|        | JP6.8       | 83 PD.2 / SPI2_MISO0                                  |
|        | JP6.9       | 84 PD.3 / SPI2_MOSI0                                  |
|        | JP6.10      | 85 PD.4 / SPI2_MISO1                                  |
|        | JP6.11      | 86 PD.5 / SPI2_MOSI1                                  |
|        | JP6.12      | 87 PC.7 / ACMP0_N / AD5 / SC1_CD                      |
|        | JP6.13      | 88 PC.6 / ACMP0_P / SC0_CD / AD4                      |
|        | JP6.14      | 89 PC.15 / AD3 / ACMP1_N                              |
|        | JP6.15      | 90 PC.14 / AD2 / ACMP1_P                              |
|        | JP6.16      | 91 PB.15 / INT1 / TM0_EXT / TM0 / AD6                 |
|        | JP6.17      | 92 PF.0 / XT1_OUT                                     |
|        | JP6.18      | 93 PF.1 / XT1_IN                                      |
|        | JP6.19      | 94 nRESET   |
|        | JP6.20      | 95 VSS  |
|        | JP6.21      | 96 VDD  |
|        | JP6.22      | 97 PF.2 / PS2_DAT                                     |
|        | JP6.23      | 98 PF.3 / PS2_CLK                                     |
|        | JP6.24      | 99 PVSS   |
|        | JP6.25      | 100 PB.8 / STADC / TM0 / CLKO                         |
|        | JP6.26      | GND GND   |

Table 3-2 NUC240V Full-pin Extension Connectors and GPIO Function List

### 3.3.2 Arduino UNO Compatible Extension Connectors

Figure 3-4 shows the Arduino UNO compatible extension connectors.

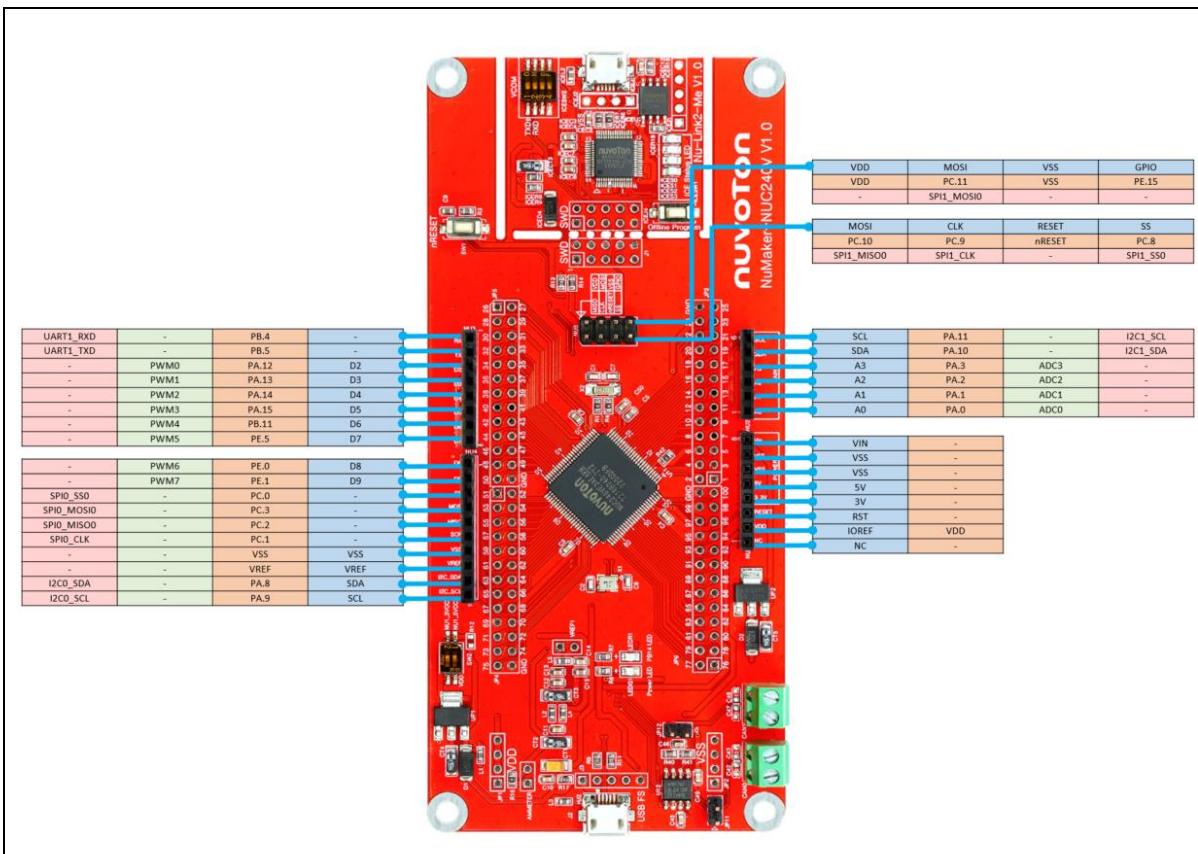


Figure 3-4 Arduino UNO Compatible Extension Connectors

| Header |        | NuMaker-NUC240V           |                     | Header |       | NuMaker-NUC240V           |                     |
|--------|--------|---------------------------|---------------------|--------|-------|---------------------------|---------------------|
|        |        | Compatible to Arduino UNO | GPIO Pin of NUC240V |        |       | Compatible to Arduino UNO | GPIO Pin of NUC240V |
| NU3    | NU3.1  | RX                        | PB4                 | NU2    | NU2.6 | SCL                       | PA11                |
|        | NU3.2  | TX                        | PB5                 |        | NU2.5 | SDA                       | PA10                |
|        | NU3.3  | D2                        | PA12                |        | NU2.4 | A3                        | PA3                 |
|        | NU3.4  | D3                        | PA13                |        | NU2.3 | A2                        | PA2                 |
|        | NU3.5  | D4                        | PA14                |        | NU2.2 | A1                        | PA1                 |
|        | NU3.6  | D5                        | PA15                |        | NU2.1 | A0                        | PA0                 |
|        | NU3.7  | D6                        | PB11                |        | NU1.8 | VIN                       | -                   |
|        | NU3.8  | D7                        | PE5                 |        | NU1.7 | VSS                       |                     |
| NU4    | NU4.1  | D8                        | PE0                 | NU1    | NU1.6 | VSS                       |                     |
|        | NU4.2  | D9                        | PE1                 |        | NU1.5 | 5V                        |                     |
|        | NU4.3  | SS/D10                    | PC0                 |        | NU1.4 | 3V                        |                     |
|        | NU4.4  | MOSI                      | PC3                 |        | NU1.3 | RST                       | nRESET              |
|        | NU4.5  | MISO                      | PC2                 |        | NU1.2 | IOREF                     | V <sub>REF</sub>    |
|        | NU4.6  | SCK                       | PC1                 |        | NU1.1 | NC                        | -                   |
|        | NU4.7  | VSS                       | V <sub>SS</sub>     |        |       |                           |                     |
|        | NU4.8  | VREF                      | V <sub>REF</sub>    |        |       |                           |                     |
|        | NU4.9  | SDA                       | PA8                 |        |       |                           |                     |
|        | NU4.10 | SCL                       | PA9                 |        |       |                           |                     |

Table 3-3 Arduino UNO Extension Connectors and NUC240V Mapping GPIO List

### 3.4 Power Supply Configuration

The NuMaker-NUC240V is able to adopt multiple power supplies. External power sources include NU1 Vin (7 V to 12 V), V<sub>DD</sub> (depending on the target chip operating voltage), and PC through USB connector. By using switches and voltage regulator, multiple power domains can be created on the NuMaker-NUC240V.

#### 3.4.1 VIN Power Source

Table 3-4 presents the Vin power source.

| Connector | Net Name in Schematic | Description   |
|-----------|-----------------------|---|
| NU1 pin8  | NU1_VIN               | Board external power source, with voltage range from 7 V to 12 V. The voltage regulator UP2 converts the NU1 pin8 input voltage to 5 V and supplies it to NU1_5VCC. |

Table 3-4 Vin Power Source

#### 3.4.2 5 V Power Sources

Table 3-5 presents the 5 V power sources.

| Connector | Net Name in Schematic | Description  |
|-----------|-----------------------|--|
| ICEJ3     | USB_HS_VBUS           | ICE USB connector supplies 5 V power from PC to NUC240V target board and Nu-Link2-Me.                                      |
| J2        | USB_VBUS              | USB connector on NuMaker-NUC240V supplies 5 V power from PC to NUC240V target board and Nu-Link2-Me.                       |
| NU1 pin5  | NU1_5VCC              | ICEJ3, J2 or NU1 pin8 supplies 5 V power to NU1 pin5. NU1 pin5 supplies 5 V power to target chip or Arduino adapter board. |

Table 3-5 5 V Power Sources

### 3.4.3 3.3 V Power Sources

Table 3-6 presents the 3.3 V power sources.

| Voltage Regulator | 5 V Source  | Description   |
|-------------------|-------------|---|
| ICEUP1            | USB_HS_VBUS | ICEUP1 converts USB_HS_VBUS to 3.3 V and supplies 3.3 V to NUC240V target board or ICE chip.  |
| UP1               | USB_VBUS    | UP1 converts USB_VBUS to 3.3 V and supplies 3.3 V to NUC240V target board.<br><b>Note:</b> SW2.2 (NU1_3VCC) should be switched to ON. |
| UP1               | NU1_5VCC    | UP1 converts NU1_5VCC to 3.3 V and supplies 3.3 V to NUC240V target board.<br><b>Note:</b> SW2.2 (NU1_3VCC) should be switched to ON. |

Table 3-6 3.3 V Power Sources

### 3.4.4 1.8 V Power Sources

Table 3-7 presents the 1.8 V power source.

| Voltage Regular | 5V Source   | Description  |
|-----------------|-------------|--|
| ICEUP2          | USB_HS_VBUS | ICEUP2 converts USB_HS_VBUS to 1.8 V and supplies 1.8 V to NUC240V target board or ICE chip. |

Table 3-7 1.8 V Power Sources

### 3.4.5 Power Connectors

Table 3-8 presents the power connectors.

| Connector | Description                                       |
|-----------|---|
| JP1       | V <sub>DD</sub> connector on the NuMaker-NUC240V. |
| JP2       | V <sub>ss</sub> connector on the NuMaker-NUC240V. |

Table 3-8 Power Connectors

### 3.4.6 USB Connectors

Table 3-9 presents the USB connectors.

| Connector | Description   |
|-----------|---|
| ICEJ3     | ICE USB connector on Nu-Link2-Me for power supply, debugging and programming from PC. |
| J2        | USB FS connector on NuMaker-NUC240V for power supply.                                 |

Table 3-9 USB Connectors

### 3.4.7 Power Switches

Table 3-10 presents the power switches.

| Switch  | Description  |
|---------|--|
| ICEJPR1 | Configures the target chip operating voltage at 1.8 V / 3.3 V / 5 V. |
| ICEJPR2 | Configures the ICE chip operating voltage at 1.8 V / 3.3 V.          |
| SW2     | Configures the target chip operating voltage at 3.3 V / 5 V.         |

Table 3-10 Power Switches

### 3.4.8 Power Supply Models

#### 3.4.8.1 External Power Supply through Nu-Link2-Me to Target Chip

The external power supply source on Nu-Link2-Me is shown in Figure 3-5.

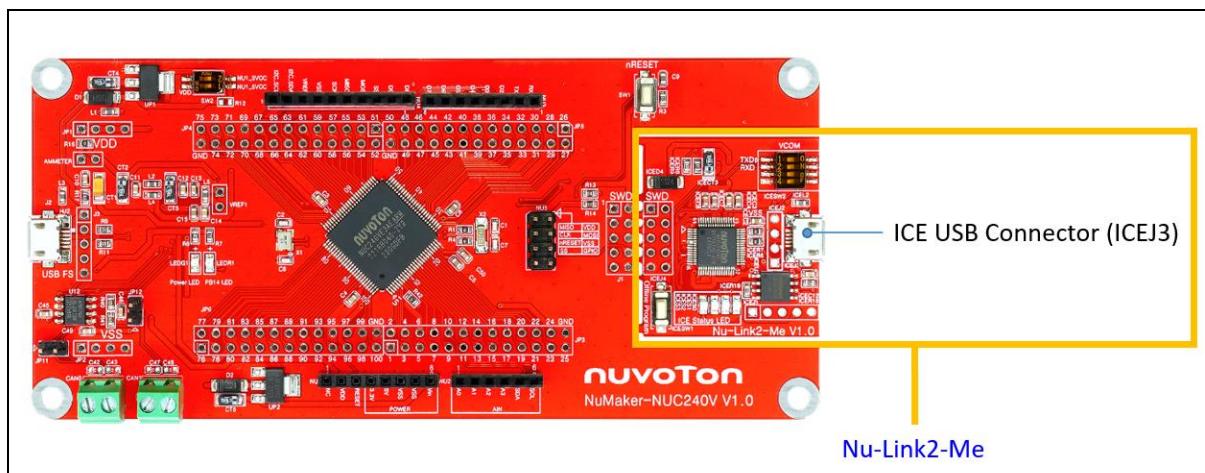


Figure 3-5 External Power Supply Sources on Nu-Link2-Me

To use ICEJ3 as external power supply source with Nu-Link2-Me, please follow the steps below:

Solder the resistor on ICEJPR1 (MCUVCC) depending on the target chip operating voltage.

Solder the resistor on ICEJPR2 (ICEVCC) depending on the ICE chip operating voltage.

Switch the SW2 to OFF.

Connect the external power supply to ICEJ3.

Table 3-11 presents all power models when supplying external power through Nu-Link2-Me. The Nu-Link2-Me external power sources are highlighted in yellow.

| Model   | Target Chip Voltage | ICEJ3         | ICEJPR1 (MCUVCC) Selection <sup>[1]</sup> | ICEJPR2 (ICEVCC) Selection <sup>[2]</sup> | ICE Chip Voltage | SW2 Selection | J2 | Vin | JP1          |
|---|---------------------|---------------|---|---|------------------|---------------|----|-----|--------------|
| 1   | 1.8 V               | Connect to PC | 1.8 V                                     | 1.8 V                                     | 1.8 V            | Off           | -  | -   | 1.8 V output |
| 2   | 3.3 V               | Connect to PC | 3.3 V (default)                           | 3.3 V (default)                           | 3.3 V            | Off           | -  | -   | 3.3 V output |
| 3   | 5 V                 | Connect to PC | 5 V                                       | 3.3 V (default)                           | 3.3 V            | Off           | -  | -   | 5 V output   |
| <b>Note:</b>  |                     |               |   |   |                  |               |    |     |              |
| 1. 0 Ω should be soldered between ICEJPR1's MCUVCC and 1.8 V / 3.3 V / 5 V.<br>2. 0 Ω should be soldered between ICEJPR2's ICEVCC and 1.8 V / 3.3 V.<br>3. -: Unused. |                     |               |   |   |                  |               |    |     |              |

Table 3-11 Supply External Power through Nu-Link2-Me

### 3.4.8.2 External Power Supply through NUC240V Target Board to Target Chip

The external power supply sources on NUC240V target board are shown in Figure 3-6.

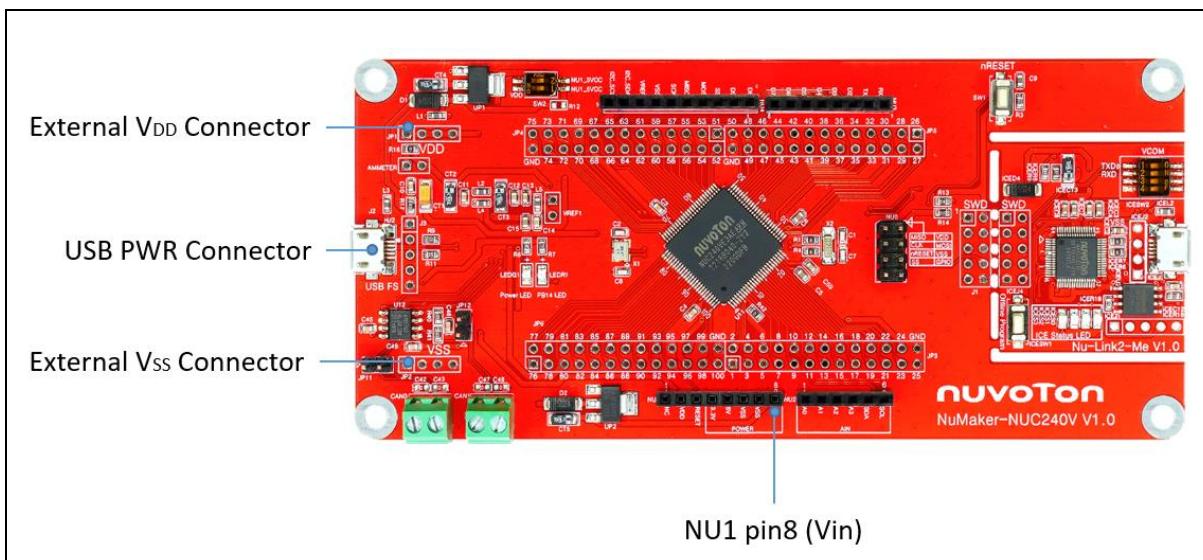


Figure 3-6 External Power Supply Sources on NUC240V Target Board

To use Vin or J2 as external power supply source, please follow the steps below:

Switch the SW2 depending on the target chip operating voltage.

Remove the resistor on ICEJPR1 (MCUVCC).

Solder the resistor on ICEJPR2 (ICEVCC) depending on the ICE chip operating voltage.

Connect the external power supply to Vin or J2.

To use JP1 as external power supply source, please follow the steps below:

1. Switch the SW2 to OFF.

Remove the resistor on ICEJPR1 (MCUVCC).

Solder the resistor on ICEJPR2 (ICEVCC) depending on the ICE chip operating voltage.

Connect ICEJ3 to PC.

Connect the external power supply to JP1.

To use Vin or J2 as external power supply source with Nu-Link2-Me detached from NuMaker-NUC240V, please follow the steps below:

1. Switch the SW2 depending on the target chip operating voltage.

Detach the Nu-Link2-Me from NuMaker-NUC240V.

Connect the external power supply to Vin or J2.

To use JP1 as external power supply source with Nu-Link2-Me detached from NuMaker-NUC240V, please follow the steps below:

1. Switch the SW2 to OFF.

Detach the Nu-Link2-Me from NuMaker-NUC240V.

Connect the external power supply to JP1.

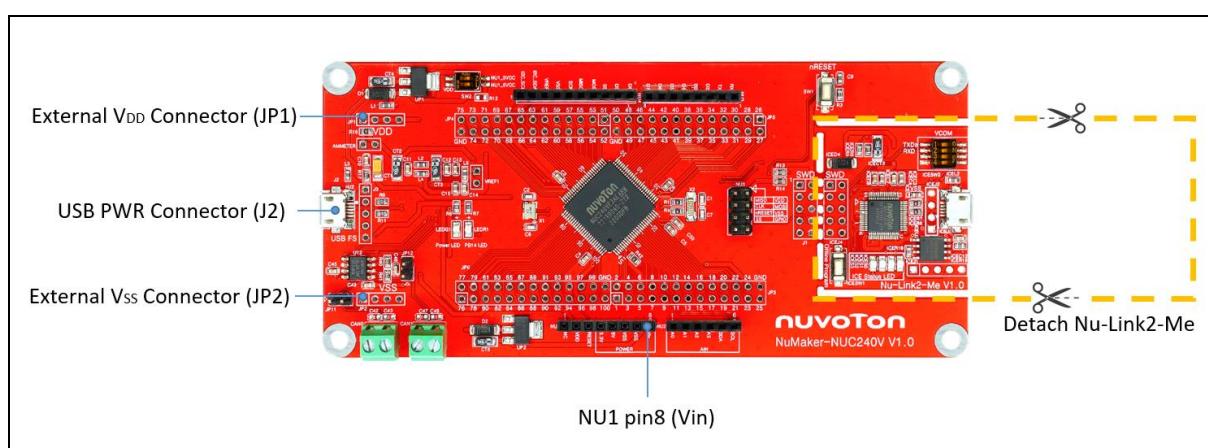


Figure 3-7 Detach the Nu-Link2-Me from NuMaker-NUC240V

Table 3-12 presents all power models when supplies external power through NUC240V target board. The NUC240V target board external power sources are highlighted in yellow.

| Model | Target Chip Voltage | Vin <sup>[1]</sup> | J2 <sup>[1]</sup> | ICEJ3               | SW2 Selection | JP1 <sup>[2]</sup>     | ICEJPR1 (MCUVCC) Selection <sup>[3]</sup> | ICEJPR2 (ICEVCC) Selection <sup>[4]</sup> | ICE Chip Voltage <sup>[5]</sup> |
|-------|---------------------|--------------------|-------------------|---------------------|---------------|------------------------|---|---|---------------------------------|
| 4     | 3.3 V               | 7 V ~ 12 V Input   | -                 | -                   | NU1 3VCC      | 3.3 V output           | Remove resistor                           | 3.3 V                                     | 3.3 V                           |
| 5     | 3.3 V               | -                  | Connect to PC     | -                   | NU1 3VCC      | 3.3 V output           | Remove resistor                           | 3.3 V                                     | 3.3 V                           |
| 6     | 5 V                 | 7 V ~ 12 V Input   | -                 | -                   | NU1 5VCC      | 5 V output             | Remove resistor                           | 3.3 V                                     | 3.3 V                           |
| 7     | 5 V                 | -                  | Connect to PC     | -                   | NU1 5VCC      | 5 V output             | Remove resistor                           | 3.3 V                                     | 3.3 V                           |
| 8     | 2.5 V ~ 5.5 V       | -                  | -                 | Connect to PC       | OFF           | DC Input 2.5 V ~ 5.5 V | Remove resistor                           | 1.8 V / 3.3 V                             | 1.8 V / 3.3 V                   |
| 9     | 2.5 V ~ 5.5 V       | -                  | -                 | Nu-Link2-Me removed | OFF           | DC Input 2.5 V ~ 5.5 V | -   | -   | -                               |

**Note:**

1. The Vin input voltage will be converted by voltage regulator UP2 to 5 V. Supplying external power to Vin or J2 can provide 5 V to NU1 pin5 (5V) and 3.3 V to NU1 pin4 (3VCC).
2. JP1 external power input only provides voltage to target chip.
3. 0 Ω should be removed from ICEJPR1's MCUVCC and 1.8 V / 3.3 V / 5 V.
4. 0 Ω should be soldered between ICEJPR2's ICEVCC and 1.8 V / 3.3 V.
5. The ICE chip voltage should be close to the target chip voltage.
6. -: Unused

Table 3-12 Supply External Power for NUC240V Target Board

### 3.5 External Reference Voltage Connector

Table 3-13 External Reference Voltage Connector presents the external reference voltage connector.

| Connector | Description   |
|-----------|---|
| VREF1     | Connector for user to connect to the external reference voltage pin of the target chip. User needs to remove the L5 ferrite bead. |

Table 3-13 External Reference Voltage Connector

### 3.6 Ammeter Connector

User can refer to the sample code in NUC230\_240 series BSP - SYS\_PowerDown\_MinCurrent and Figure 3-8 to measure the minimum current in Power-down mode. Figure 3-9 shows the path of the sample code, which has relative settings of entering Power-down mode.

Table 3-14 presents the ammeter connector.

| Connector | Description  |
|-----------|--|
| AMMETER   | Connector for user to measure the target chip power consumption easily. User needs to remove the R16 resistor. |

Table 3-14 Ammeter Connector

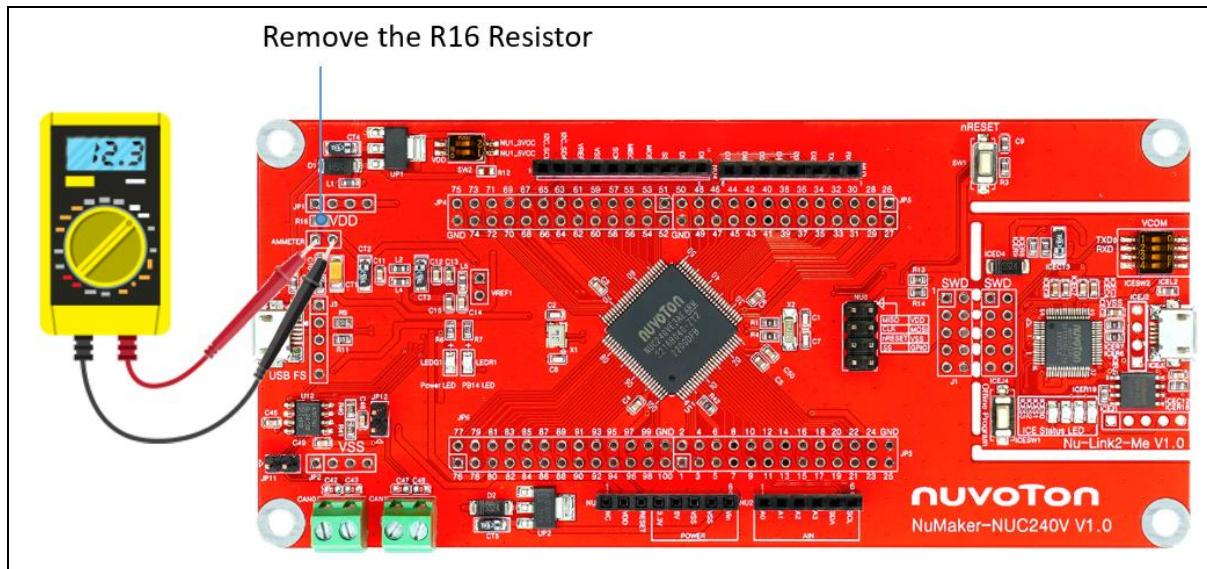


Figure 3-8 Wiring between Ammeter Connector and Ammeter

NUC230\_240\_Series\_BSP\_CMSIS

SampleCode

StdDriver

SYS\_PowerDown\_MinCurrent

Figure 3-9 Project Path of SYS\_PowerDown\_MinCurrent

### 3.7 Push Buttons

Table 3-15 presents the push buttons.

| Component | Description  |
|-----------|--|
| ICESW1    | Offline program button to start offline ICP programming the target chip. |
| SW1       | Reset button to reset the target chip.                                   |

Table 3-15 Push Buttons

### 3.8 LEDs

Table 3-16 presents the LEDs.

| Component                     | Description  |
|-------------------------------|--|
| Power LED                     | The power LED indicates that the NuMaker-NUC240V is powered. |
| PB14 LED                      | The LED is connected to the target chip PB14.                |
| ICES0, ICES1, ICES2 and ICES3 | Nu-Link2-Me status LED.                                      |

Table 3-16 LEDs

### 3.9 Nu-Link2-Me

The Nu-Link2-Me is an attached on-board debugger and programmer. The Nu-Link2-Me supports on-chip debugging, online and offline ICP programming through SWD interface. The Nu-Link2-Me also supports virtual COM port (VCOM) for printing debug messages on PC. Besides, the programming status could be shown on the built-in LEDs. Lastly, the Nu-Link2-Me could be detached from the evaluation board and become a stand-alone mass production programmer. For more information about Nu-Link2-Me, please refer to *Nu-Link2-Pro Debugger and Programmer User Manual*.

#### 3.9.1 VCOM Switches

Table 3-17 presents how to set the VCOM function by ICESW2.

| ICESW2                              |          |  |
|-------------------------------------|----------|--|
| Pin                                 | Function | Description  |
| 1                                   | TXD      | <b>On:</b> Connect target chip PD.1 (UART0_TXD) to Nu-Link2-Me.<br><b>Off:</b> Disconnect target chip PD.1 (UART0_TXD) to Nu-Link2-Me. |
| 2                                   | RXD      | <b>On:</b> Connect target chip PD.0 (UART0_RXD) to Nu-Link2-Me.<br><b>Off:</b> Disconnect target chip PD.0 (UART0_RXD) to Nu-Link2-Me. |
| <b>Note:</b> Pin 3 and 4 is unused. |          |  |

Table 3-17 VCOM Function of Nu-Link2-Me

### 3.9.2 Status LEDs

Table 3-18 presents the status LEDs patterns for different operation on Nu-Link2-Me.

| Operation Status                                | Status LED |           |           |           |
|---|------------|-----------|-----------|-----------|
|   | ICES0      | ICES1     | ICES2     | ICES3     |
| Boot  | Flash x 3  | Flash x 3 | Flash x 3 | Flash x 3 |
| Idle  | On         | -         | -         | -         |
| One Nu-Link2-Me is selected to connect          | Flash x 3  | Flash x 3 | Flash x 3 | On        |
| ICE online (Not connected to a target chip)     | On         | -         | Flash x 3 | Flash x 3 |
| ICE online (Connected to a target chip)         | On         | -         | -         | On        |
| ICE online (Failed to connect to a target chip) | On         | Any       | Flash     | On        |
| During offline programming                      | -          | On        | -         | Flash     |
| Offline programming completed                   | On         | -         | -         | -         |
| Offline programming completed (Auto mode)       | On         | On        | -         | -         |
| Offline programming failed                      | On         | Flash     | -         | -         |

**Note:** "Online" means Nu-Link2-Me is connected to ICP Programming Tool, IDE or NuTool.

Table 3-18 Operation Status LED Patterns

### 3.10 CAN Bus Interface

The NuMaker-NUC240V is implemented a CAN bus interface with an AEC-Q100 qualified high-speed CAN transceiver TJA1057GT/3. Table 3-19 presents the CAN bus interface and Table 3-20, Table 3-21 presents the CAN transceiver pin connection.

| Component | Description   |
|-----------|---|
| U10       | CAN0 transceiver TJA1057GT/3. For more information, please refer to TJA1057 product data sheet. |
| U12       | CAN1 transceiver TJA1057GT/3. For more information, please refer to TJA1057 product data sheet. |
| CAN0      | CAN0 bus line connector. Connect to U10 pin6 and pin7.  |
| CAN1      | CAN1 bus line connector. Connect to U12 pin6 and pin7.  |
| JP11      | CAN0 bus line connector. Connect to U10 pin6 and pin7.  |
| JP12      | CAN1 bus line connector. Connect to U12 pin6 and pin7.  |

Table 3-19 CAN Bus Interface

| U10 |          |  |
|-----|----------|--|
| Pin | Function | Description  |
| 1   | TXD      | Connects to target chip PD.7 (CAN0_TXD).   |
| 2   | GND      | Ground   |
| 3   | VCC      | Connects to NU1_5VCC for transceiver power supply.                                       |
| 4   | RXD      | Connects to target chip PD.6 (CAN0_RXD).   |
| 5   | VIO      | Connects to target chip supply voltage VDD for transceiver I/O voltage level adjustment. |
| 6   | CANL     | Connects to CAN0 pin1 and JP11 pin1.   |
| 7   | CANH     | Connects to CAN0 pin2 and JP11 pin2  |
| 8   | S        | Connects to target chip PB.3 for operating mode control.                                 |

Table 3-20 U10 Pin Connection

| U12 |          |  |
|-----|----------|--|
| Pin | Function | Description  |
| 1   | TXD      | Connects to target chip PD.15 (CAN1_TXD).  |
| 2   | GND      | Ground   |
| 3   | VCC      | Connects to NU1_5VCC for transceiver power supply.                                       |
| 4   | RXD      | Connects to target chip PD.14 (CAN1_RXD).  |
| 5   | VIO      | Connects to target chip supply voltage VDD for transceiver I/O voltage level adjustment. |
| 6   | CANL     | Connects to CAN1 pin1 and JP12 pin1.   |
| 7   | CANH     | Connects to CAN1 pin2 and JP12 pin2  |
| 8   | S        | Connects to target chip PC.5 for operating mode control.                                 |

Table 3-21 U12 Pin Connection

## 4 QUICK START

### 4.1 Toolchains Supporting

Install the preferred toolchain. Please make sure at least one of the toolchains has been installed.

- [KEIL MDK Nuvoton edition M0/M23](#)
- [IAR EWARM](#)

### 4.2 Nuvoton Nu-Link Driver Installation

Download and install the latest Nuvoton Nu-Link Driver.

- Download and install [Nu-Link Keil Driver](#) when using Keil MDK.
- Download and install [Nu-Link IAR Driver](#) when using IAR EWARM.

Please install the Nu-Link USB Driver as well at the end of the installation. The installation is presented in Figure 4-1 and Figure 4-2.

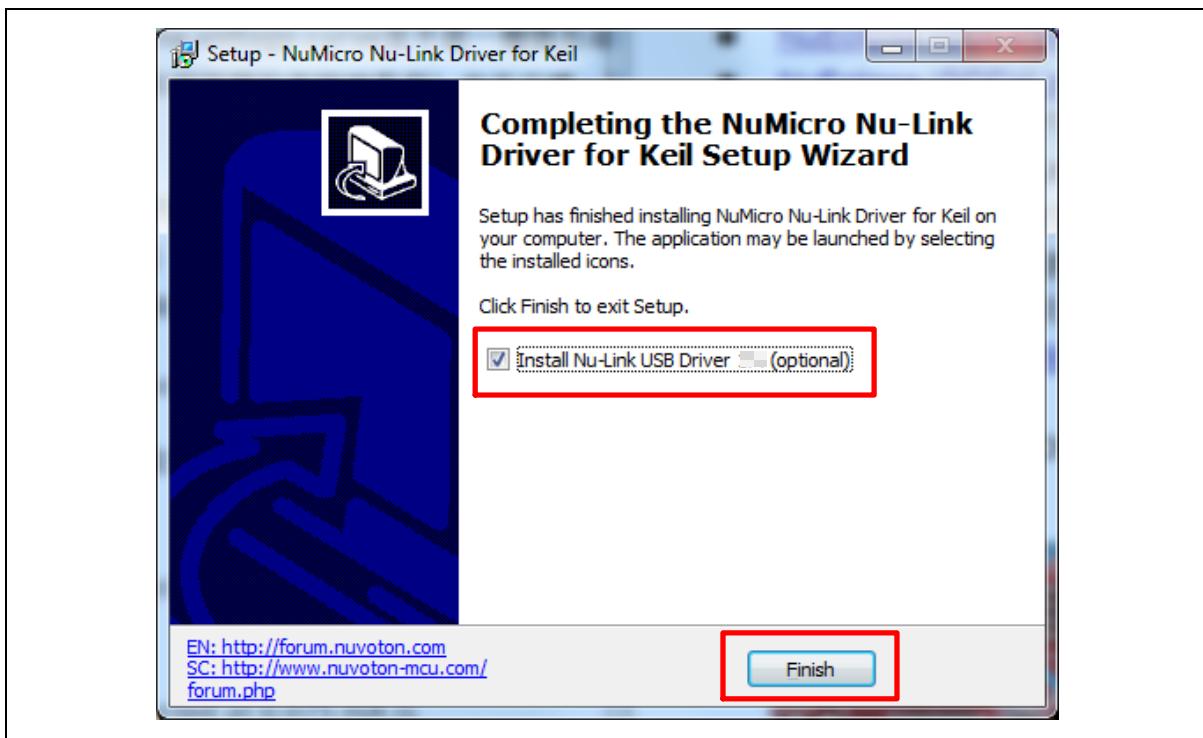


Figure 4-1 Nu-Link USB Driver Installation Setup

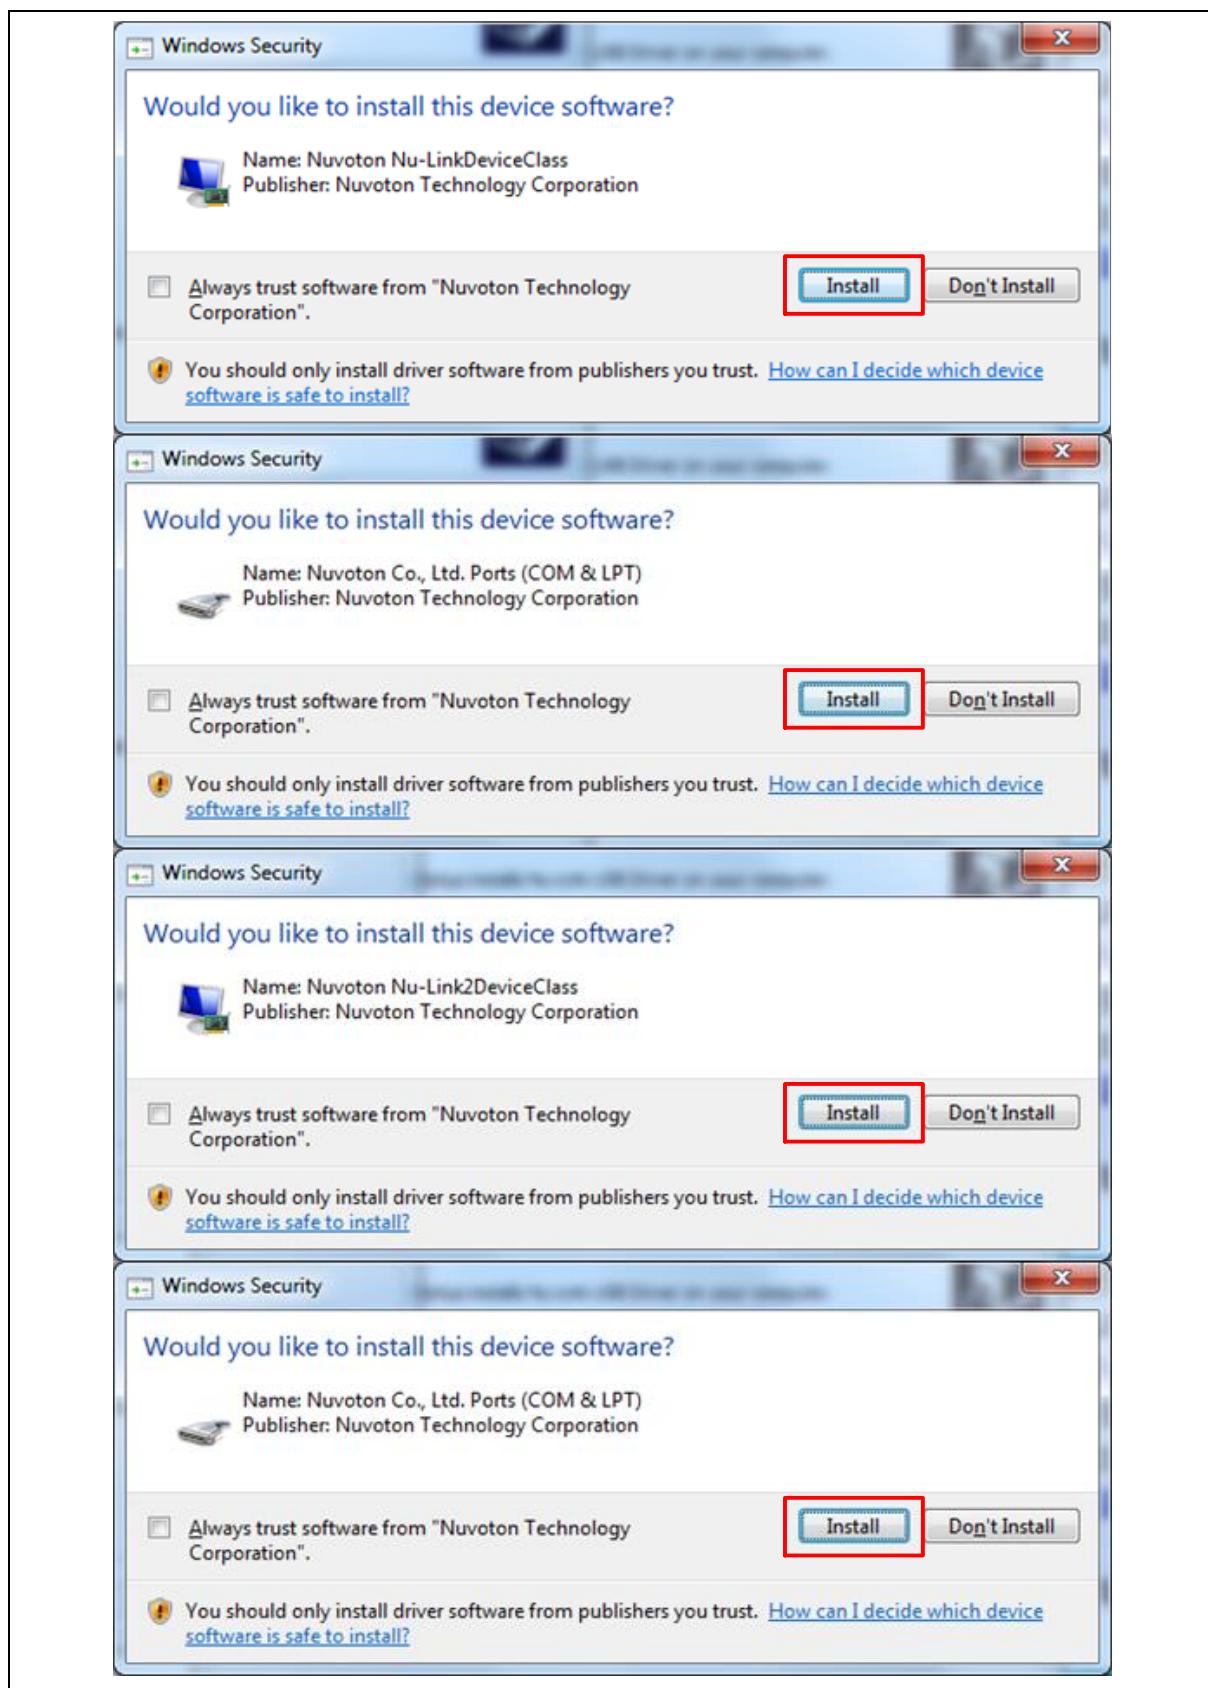


Figure 4-2 Nu-Link USB Driver Installation

#### 4.3 BSP Firmware Download

Download and unzip the [Board Support Package \(BSP\)](#).

#### 4.4 Hardware Setup

Open the virtual COM (VCOM) function by changing Nu-Link2-Me VCOM Switch No. 1 and 2 to ON.

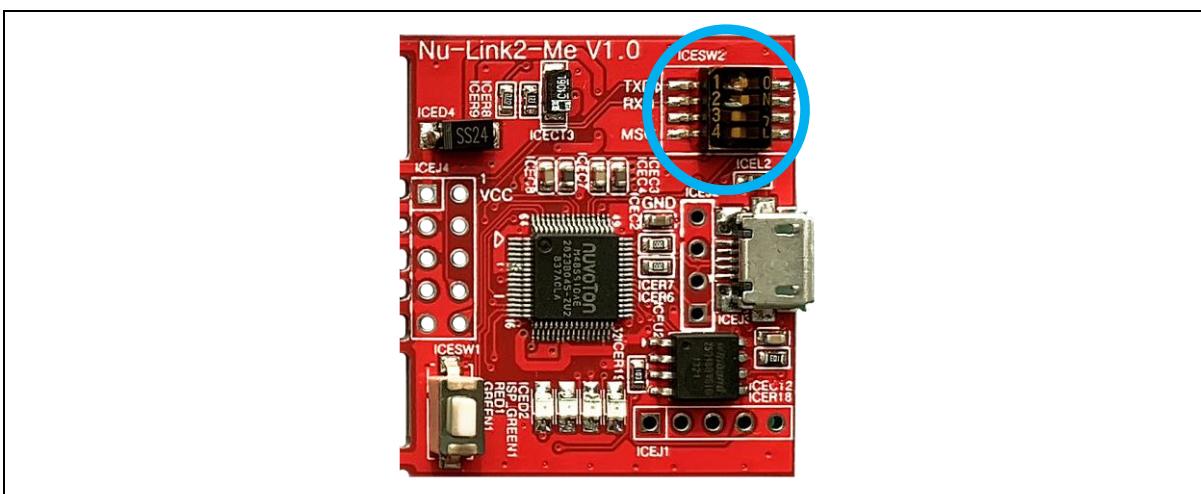


Figure 4-3 Open VCOM Function

Connect the ICE USB connector shown in Figure 4-4 to the PC USB port through a USB cable.

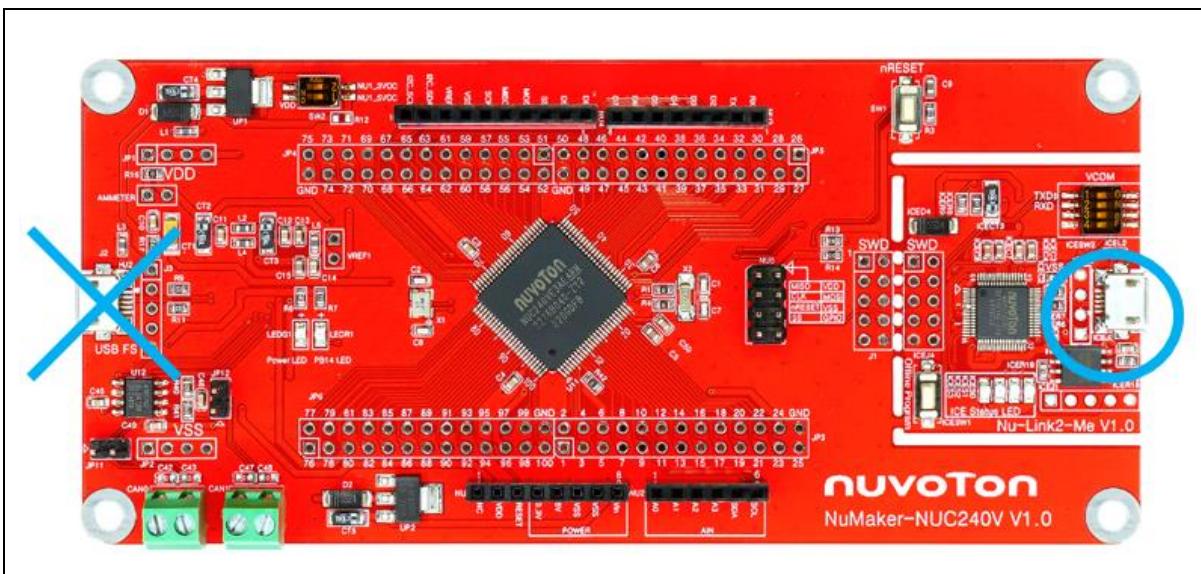


Figure 4-4 ICE USB Connector

Find the “Nuvoton Virtual COM Port” on the Device Manger as Figure 4-5.

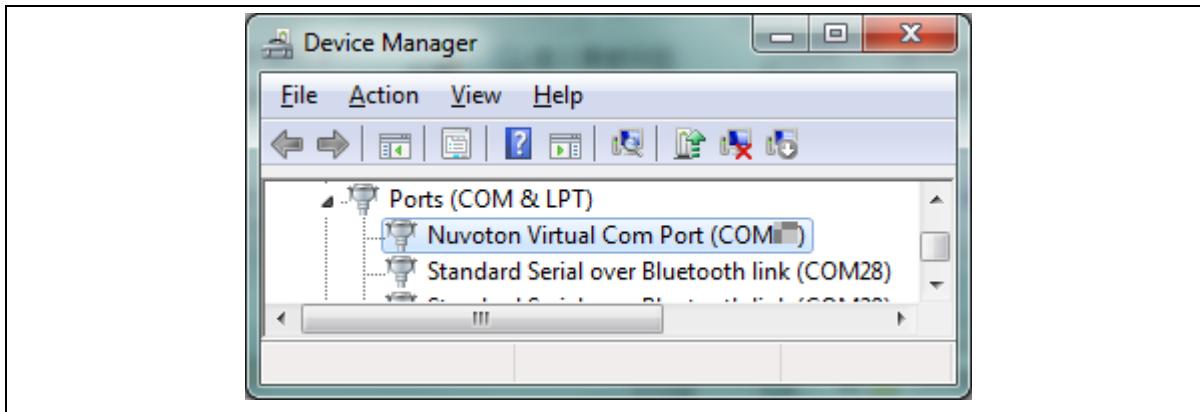


Figure 4-5 Device Manger

Open a serial port terminal, PuTTY for example, to print out debug message. Set the speed to 115200. Figure 4-6 presents the PuTTY session setting.

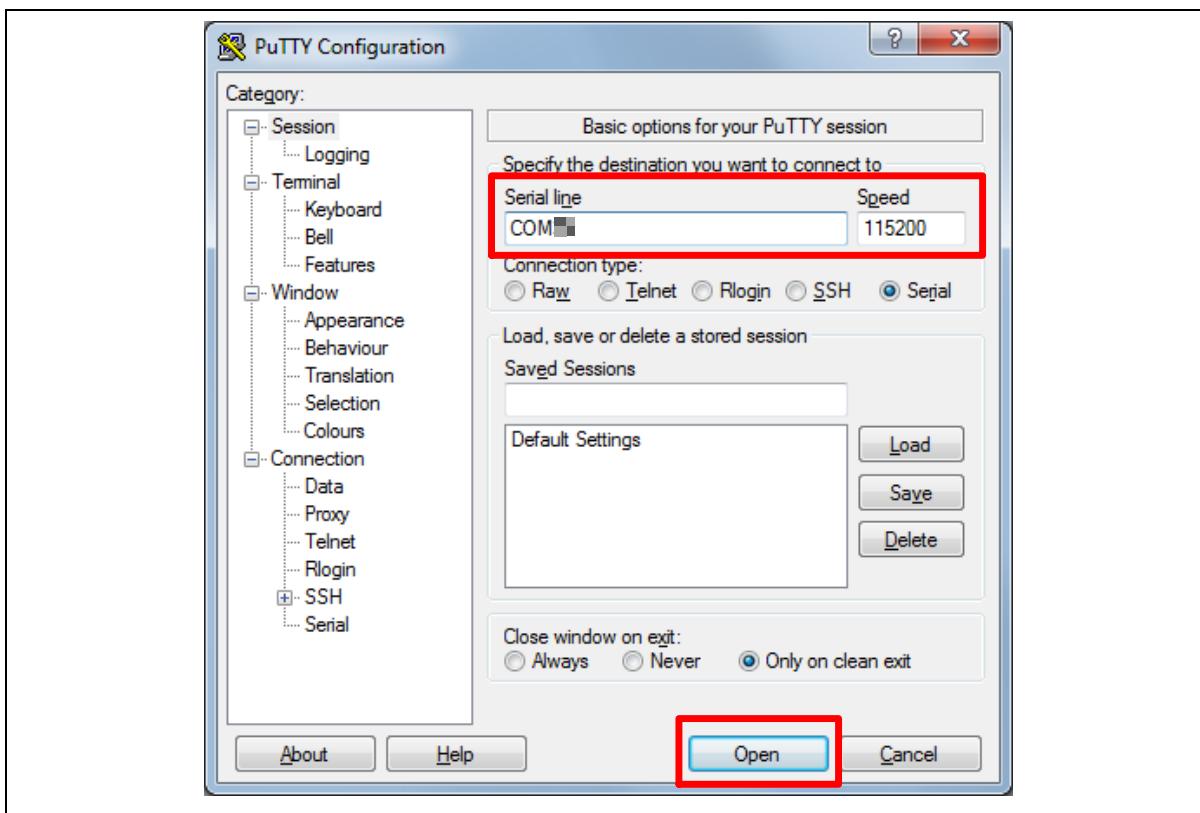


Figure 4-6 PuTTY Session Setting

## 4.5 Find the Example Project

Use the “Template” project as an example. The project can be found under the BSP folder as shown in Figure 4-7.

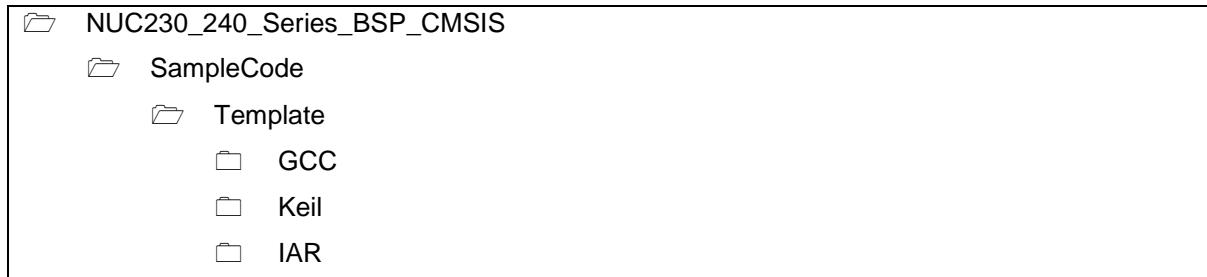


Figure 4-7 Template Project Folder Path

## 4.6 Execute the Project under Toolchains

Open and execute the project under the toolchain. The section 4.6.1 and 4.6.2 describe the steps of executing project in Keil MDK and IAR EWARM, respectively.

### 4.6.1 Keil MDK

This section provides steps to beginners on how to run a project by using Keil MDK.

Double-click the “Template.uvproj” to open the project.

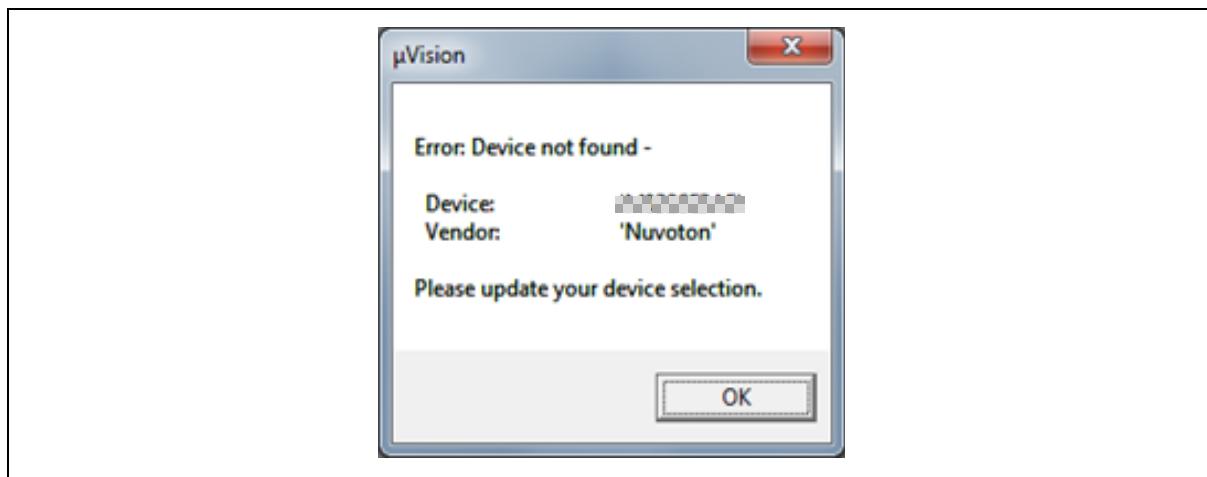


Figure 4-8 Warning Message of “Device not found”

**Note:** If Figure 4-8 warning message jumps out, please migrate to version 5 format as shown in Figure 4-9. The “.uvproj” filename extension will change to “.uvprojx”.

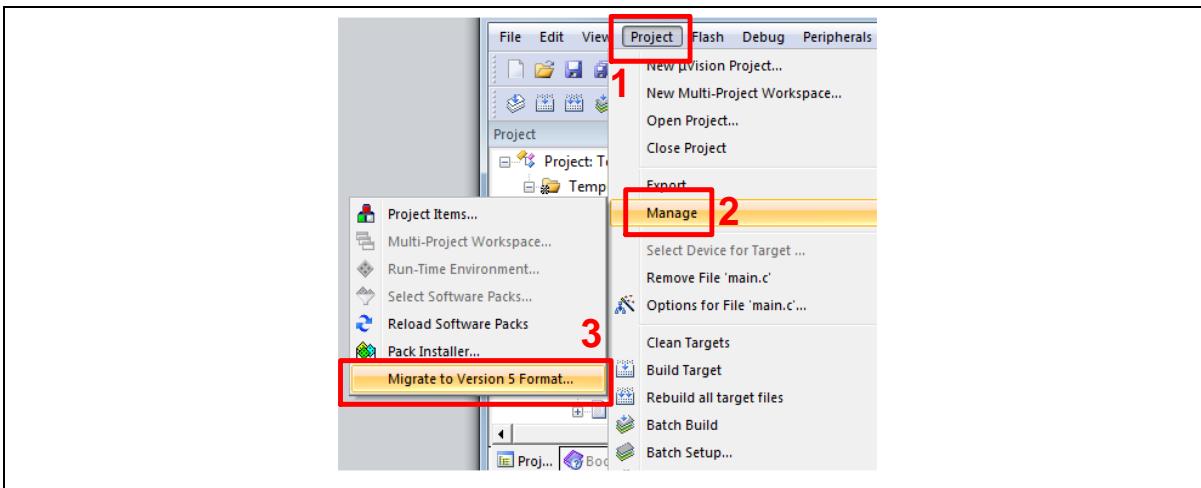


Figure 4-9 Project File Migrate to Version 5 Format

Make sure the debugger is “Nuvoton Nu-Link Debugger” as shown in Figure 4-10 and Figure 4-11.

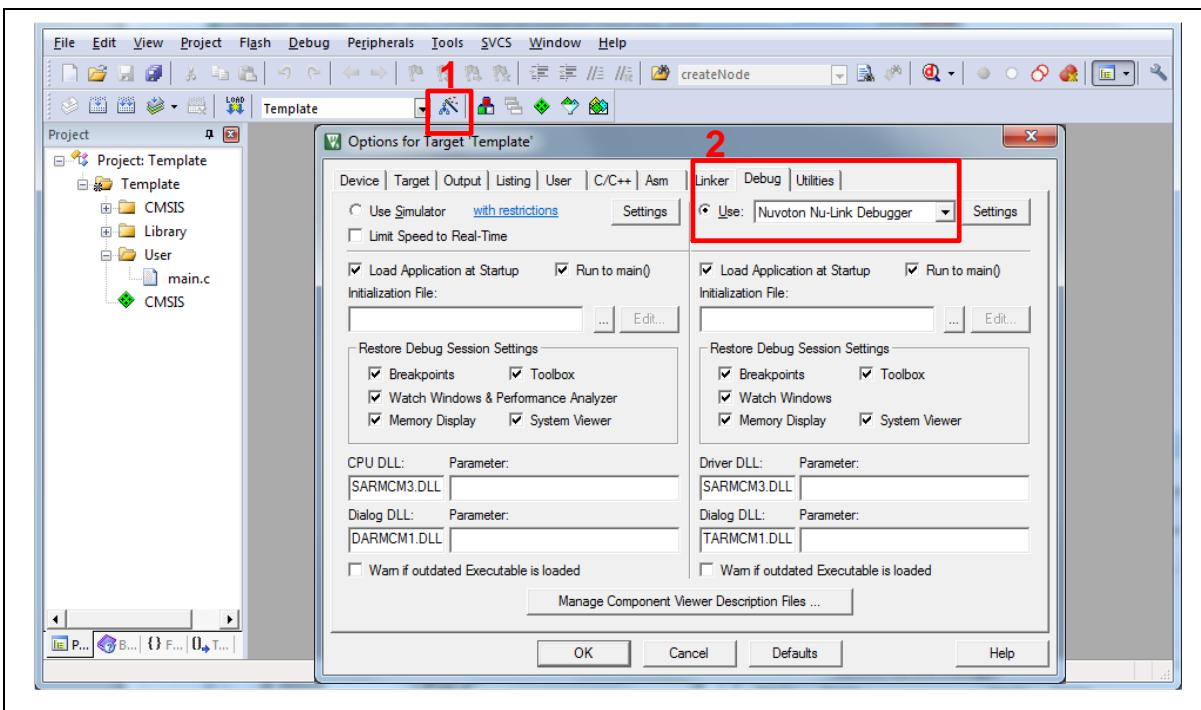


Figure 4-10 Debugger Setting in Options Window

**Note:** If the dropdown menu in Figure 4-10 does not contain “Nuvoton Nu-Link Debugger” item, please rework section 4.2.

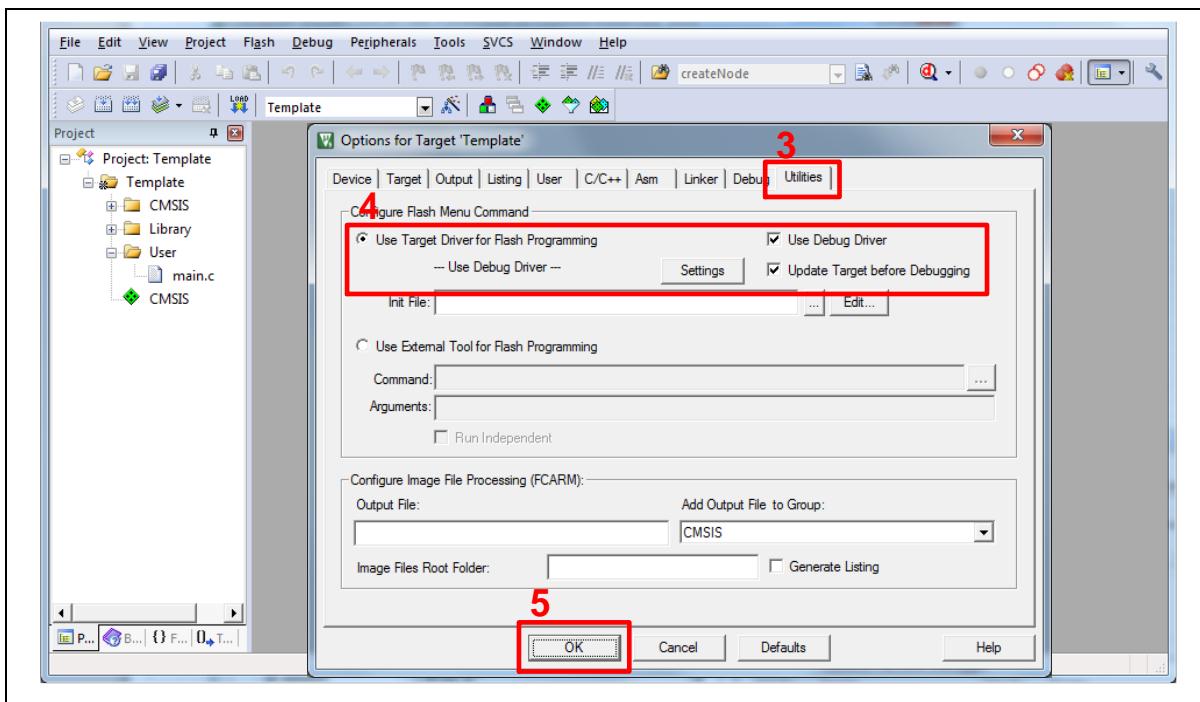


Figure 4-11 Programming Setting in Options Window

Rebuild all target files. After successfully compiling the project, download code to the Flash memory. Click “Start/Stop Debug Section” button to enter debug mode.

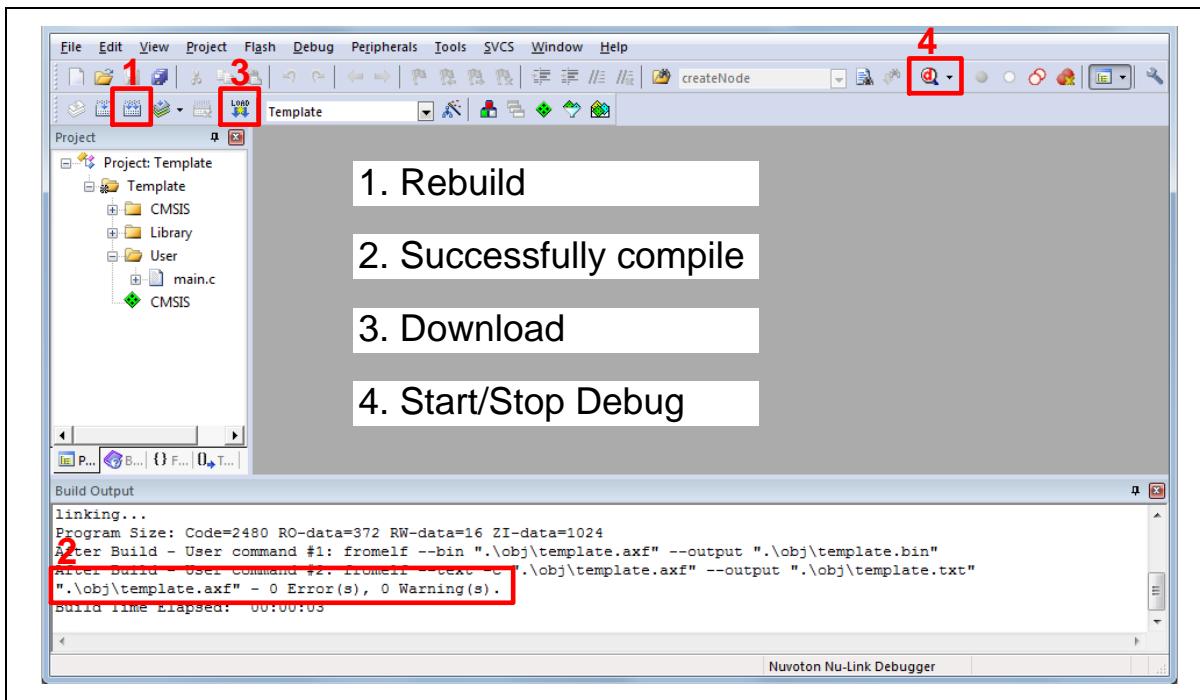


Figure 4-12 Compile and Download the Project

Figure 4-13 shows the debug mode under Keil MDK. Click “Run” and the debug message will be printed out as shown in Figure 4-14. User can debug the project under debug mode by checking source code, assembly language, peripherals’ registers, and setting breakpoint, step run, value monitor, etc.

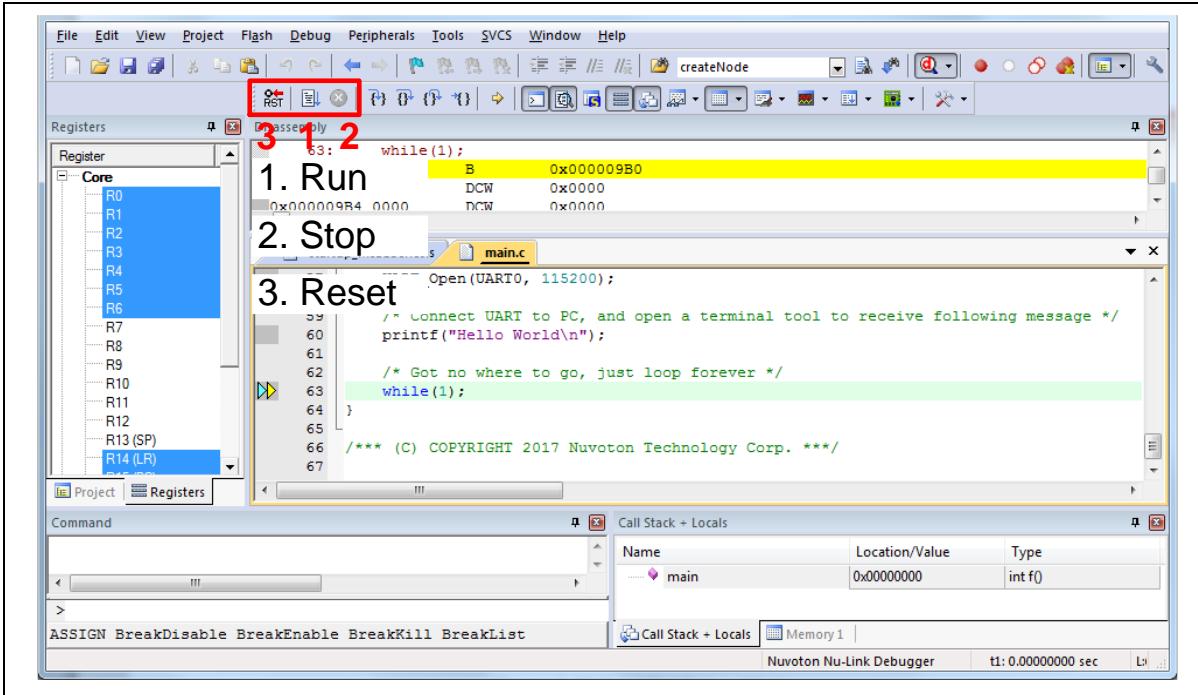


Figure 4-13 Keil MDK Debug Mode

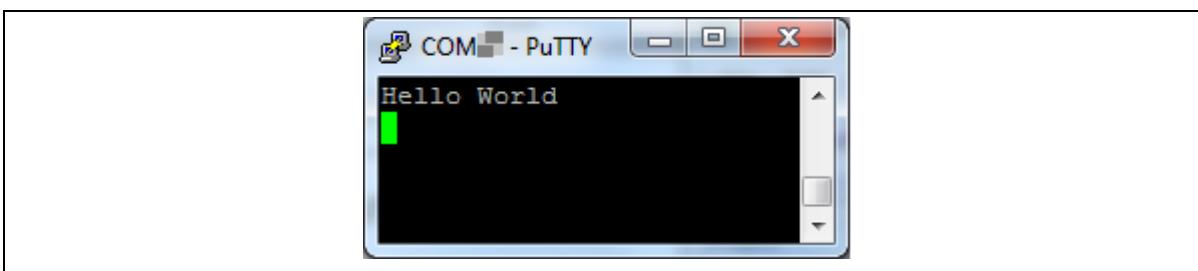


Figure 4-14 Debug Message on Serial Port Terminal Windows

#### 4.6.2 IAR EWARM

This section provides steps to beginners on how to run a project by using IAR EWARM.

Double click the “Template.eww” to open the project.

Make sure the toolbar contains “Nu-Link” item as shown in Figure 4-15.

**Note:** If the toolbar does not contain “Nu-Link” item, please rework section 4.2.

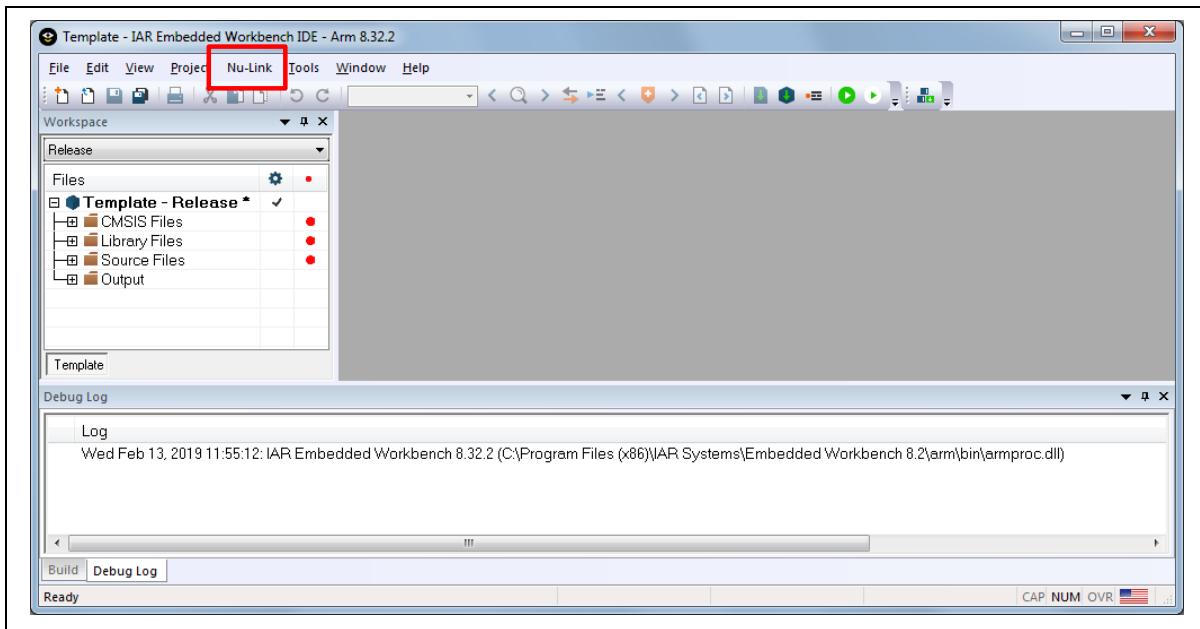


Figure 4-15 IAR EWARM Window

Make a target file as presented in Figure 4-16. After successfully compiling the project, download code to the Flash memory and enter debug mode.

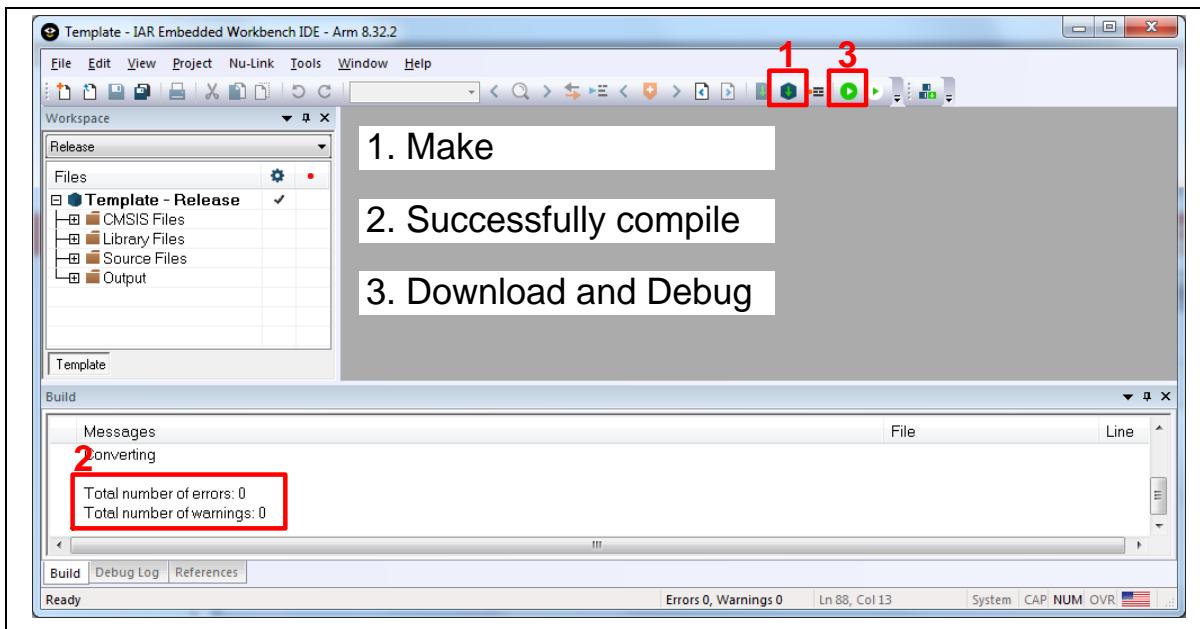


Figure 4-16 Compile and Download the Project

Figure 4-17 shows the debug mode under IAR EWARN. Click “Go” and the debug message will be printed out as shown in Figure 4-18. User can debug the project under debug mode by checking source code, assembly language, peripherals’ registers, and setting breakpoint, step run, value monitor, etc.

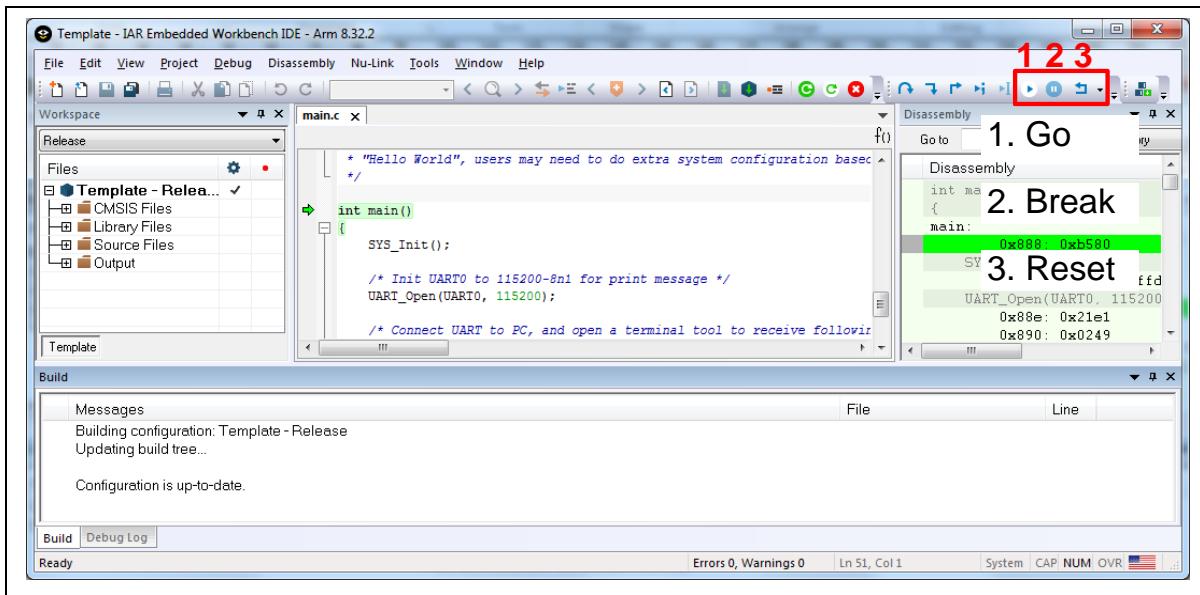


Figure 4-17 IAR EWARM Debug Mode

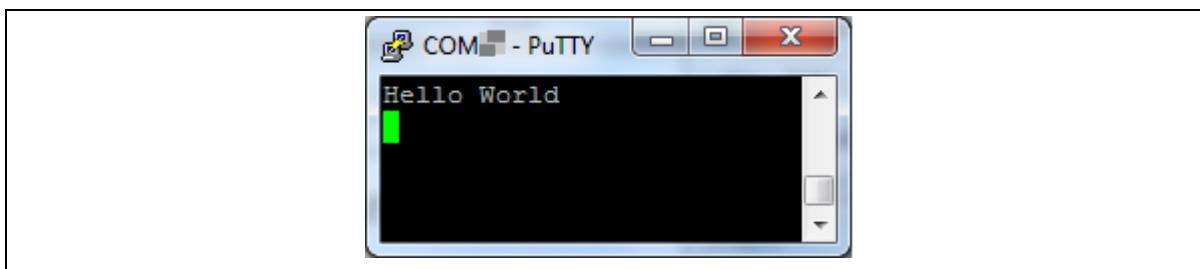


Figure 4-18 Debug Message on Serial Port Terminal Windows

## 5 NUMAKER-NUC240V SCHEMATICS

## 5.1 Nu-Link2-Me

Figure 5-1 shows the Nu-Link2-Me circuit.

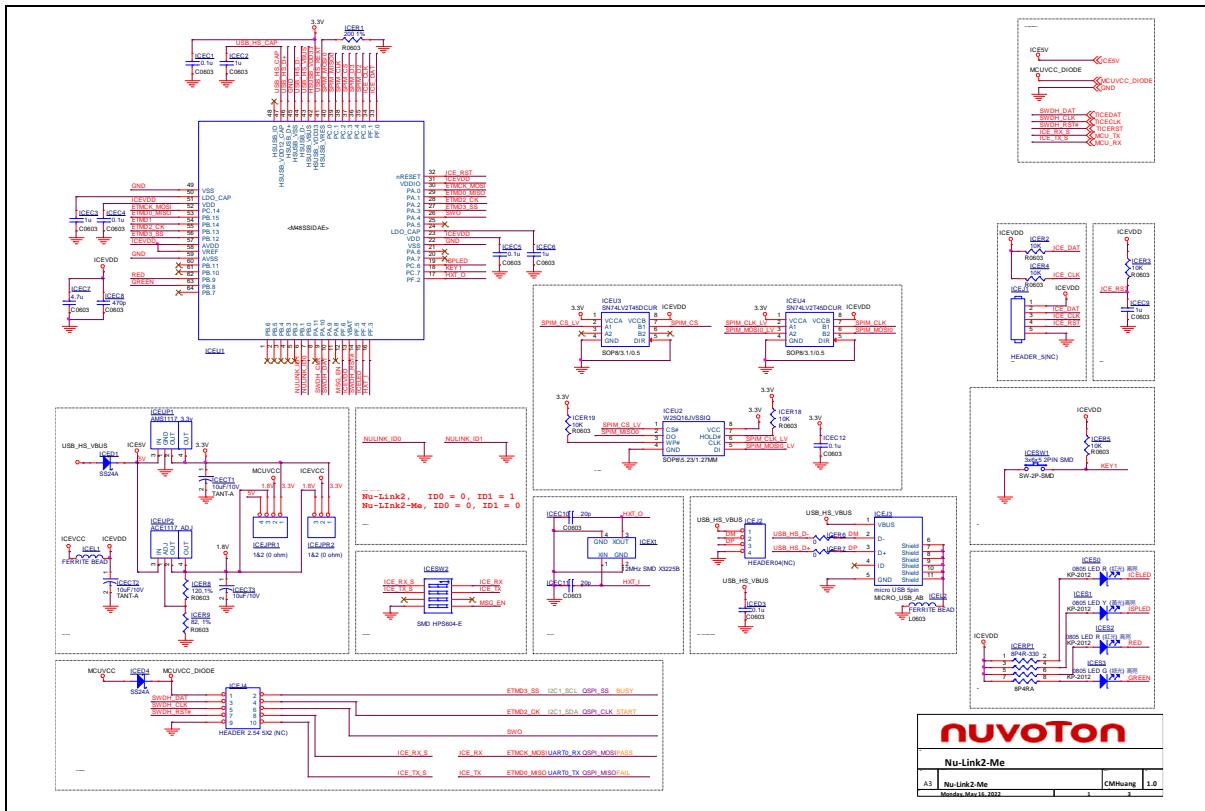


Figure 5-1 Nu-Link2-Me Circuit

## 5.2 NuMaker-NUC240V Schematics

Figure 5-2 shows the NUC240V target board circuit.

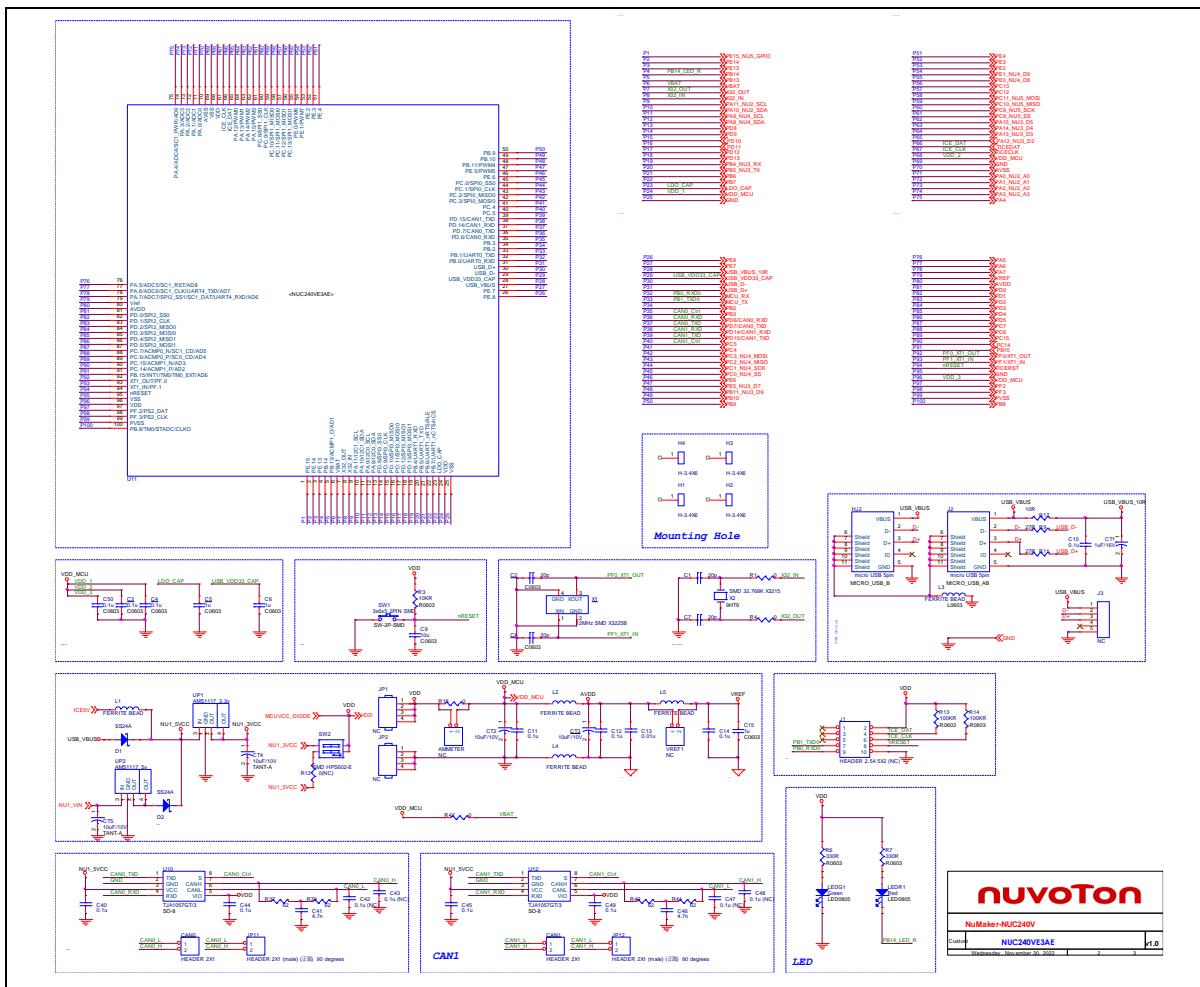


Figure 5-2 NUC240V Target Board Circuit

### 5.3 Extension Connectors

Figure 5-3 shows extension connectors of NuMaker-NUC240V.

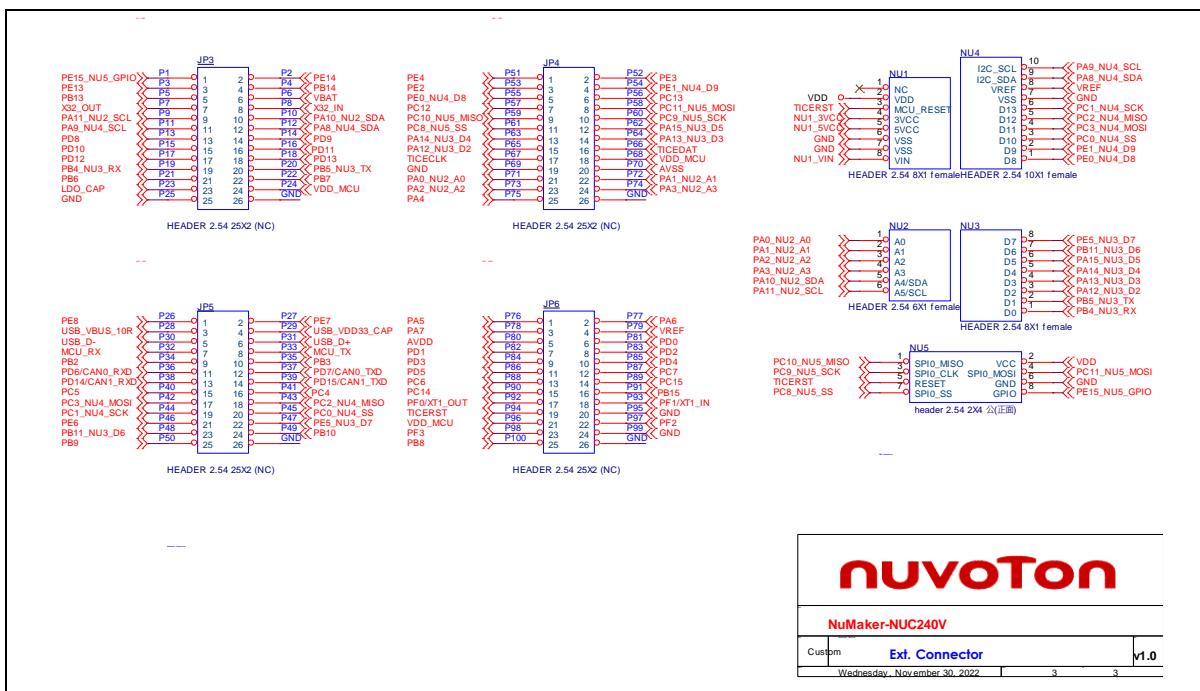


Figure 5-3 Extension Connectors Circuit

## 5.4 PCB Placement

Figure 5-4 and Figure 5-5 show the front and rear placement of NuMaker-NUC240V.

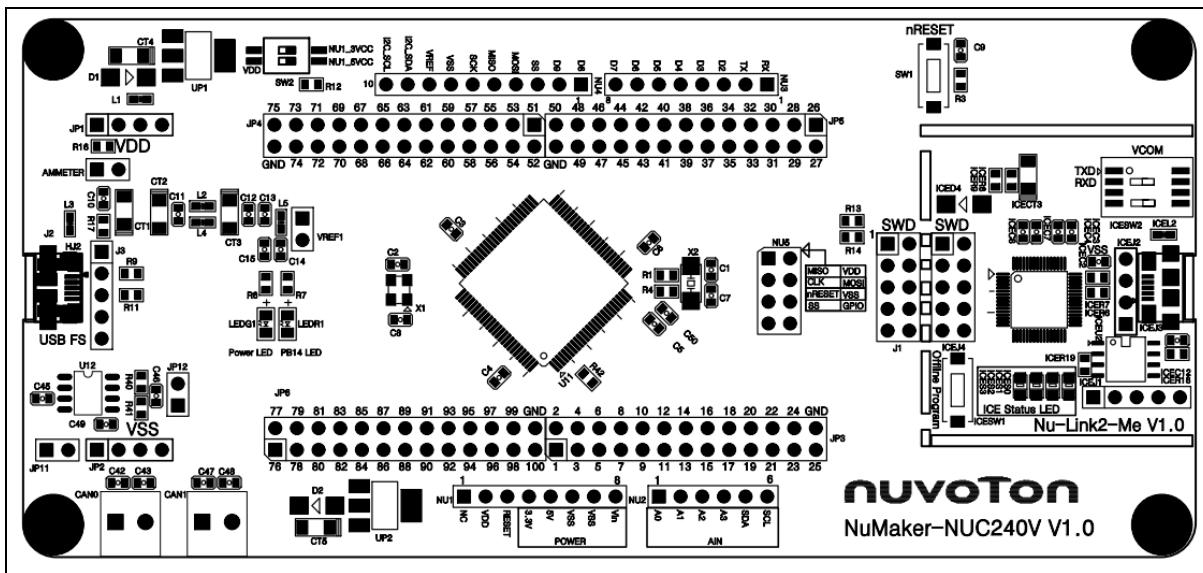


Figure 5-4 Front Placement

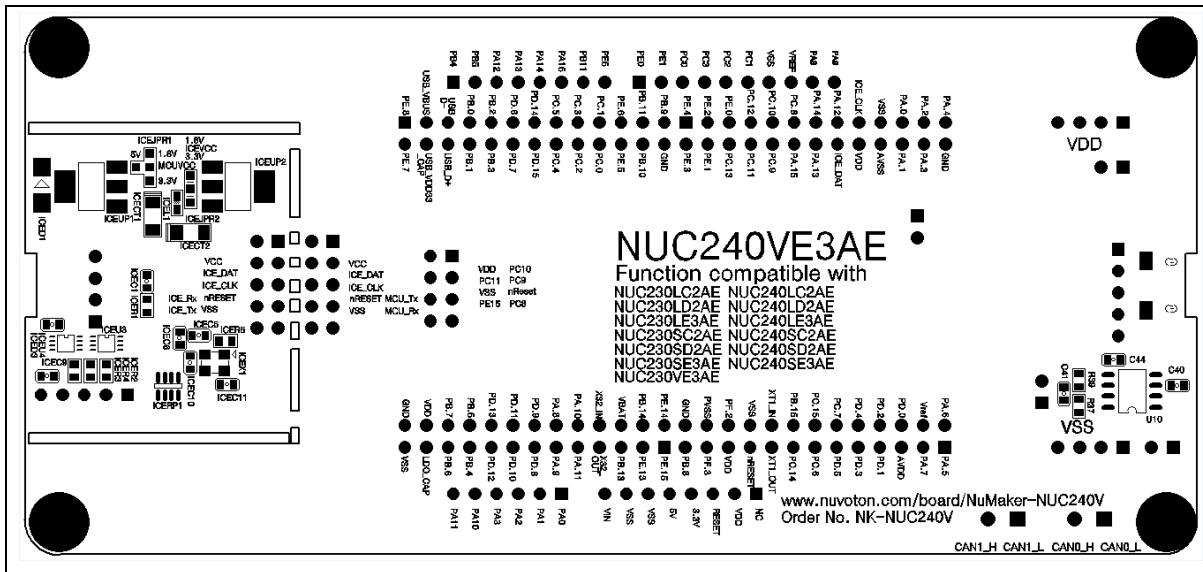


Figure 5-5 Rear Placement

## 6 REVISION HISTORY

| Date       | Revision | Description      |
|------------|----------|------------------|
| 2022.12.22 | 1.00     | Initial version. |

### Important Notice

Nuvoton Products are neither intended nor warranted for usage in systems or equipment, any malfunction or failure of which may cause loss of human life, bodily injury or severe property damage. Such applications are deemed, "Insecure Usage".

Insecure usage includes, but is not limited to: equipment for surgical implementation, atomic energy control instruments, airplane or spaceship instruments, the control or operation of dynamic, brake or safety systems designed for vehicular use, traffic signal instruments, all types of safety devices, and other applications intended to support or sustain life.

All Insecure Usage shall be made at customer's risk, and in the event that third parties lay claims to Nuvoton as a result of customer's Insecure Usage, customer shall indemnify the damages and liabilities thus incurred by Nuvoton.

---

Please note that all data and specifications are subject to change without notice.  
All the trademarks of products and companies mentioned in this datasheet belong to their respective owners.